


Trainings ▾

Install

with Mechanically Actuated Injector

⚠ CAUTION ⚠

The cam follower mounting capscrews are special 12-point flange heads. Shaft failure will result if standard capscrews are used.

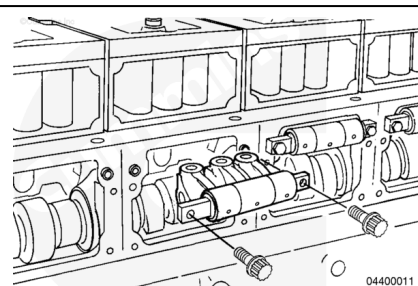

Note : Service replacement cam followers are coated with a heavy preservative to prevent rust. This preservative must be removed completely with solvent before the parts are installed on the engine.

Use clean engine oil to lubricate the camshaft and camshaft followers.

Install the cam follower assembly. The shaft **must** fit on both ring dowels.


Tighten the capscrews.

Torque Value:	Step 1	55 n.m [40 ft-lb]
	Step 2	110 n.m [80 ft-lb]
	Step 3	165 n.m [120 ft-lb]


Add a hardened washer to each cam follower cover capscrew.

Apply three drops of Loctite® 246 or equivalent to the capscrews, starting two to three threads from the tip of the capscrew.

Install the gasket, cover, and capscrews.

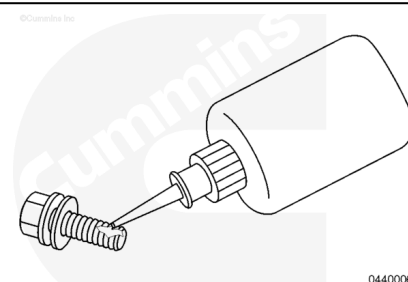


Note : The tabs on the cover gasket must be removed before installation.

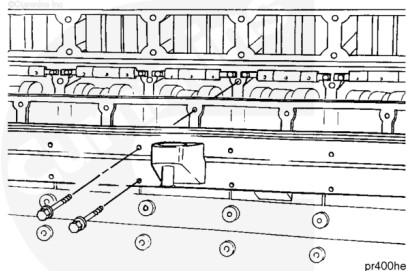

Tighten the 14 capscrews in the sequence shown.


Torque Value: 48 n•m [35 ft-lb]

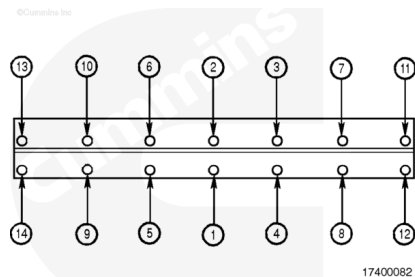

with Electronically Actuated Injector

⚠ CAUTION ⚠

The cam follower capscrew and washer is special to allow oil to flow to the cam follower shaft. Use of another capscrew will lead to engine damage.

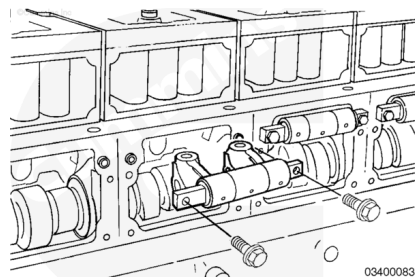

⚠ CAUTION ⚠

The washer is hardened and prevents the capscrew from bottoming out in the hole. Omitting the washer will lead to engine damage.

Note : Service replacement cam followers are coated with a heavy preservative to prevent rust. This preservative **must** be removed completely with solvent before the parts are installed on the engine. Use clean engine oil to lubricate the cam follower assembly and camshaft.

Install the cam follower assembly. The shaft **must** fit on both ring dowels.

Use clean engine oil to lubricate the capscrew threads.

Install the capscrews and special washers.


Tighten capscrews.

Torque Value:	Step 1	55 n.m [40 ft-lb]
----------------------	--------	-------------------


	Step 2	110 n.m [80 ft-lb]
	Step 3	165 n.m [120 ft-lb]

Apply three drops of threadlocker to the cam follower cover capscrews, starting two to three threads from the tip of the capscrew.

Install the cam follower cover gasket, cover, and capscrews.

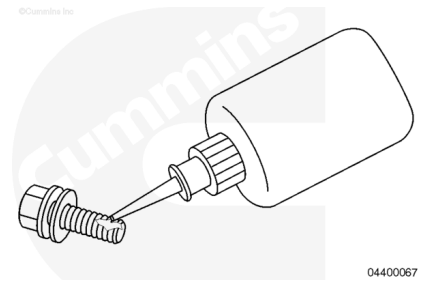

The tabs on the cam follower cover gasket **must** be removed before installation.

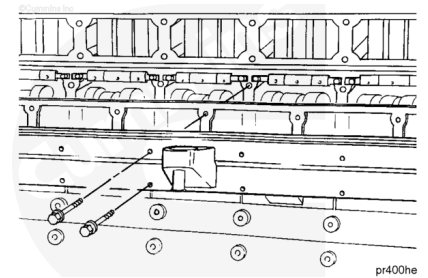

Tighten the 14 capscrews in the sequence shown in the illustration.

Torque Value: 48 n•m [35 ft-lb]

