


Trainings ▾

Remove with Mechanically Actuated Injector


Remove the cam follower cover.

Remove and discard the gasket.

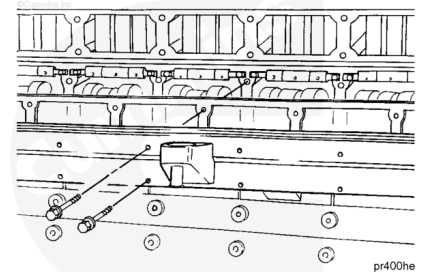


Remove the cam follower assembly capscrews.

Remove the cam follower assembly by pulling straight out until the shaft is off the ring dowels.

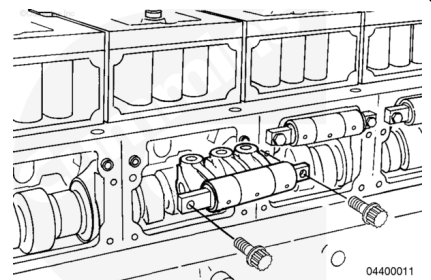


with Electronically Actuated Injector

Remove the cam follower cover. Remove and discard the gasket.

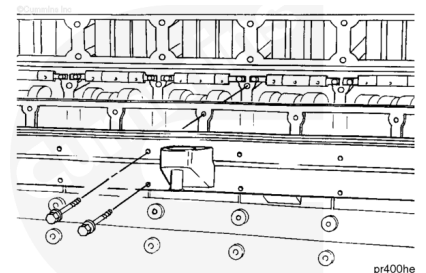

Remove the two capscrews and washers securing the cam follower assembly. Remove the cam follower assembly by pulling straight out until the shaft is off the ring dowels.

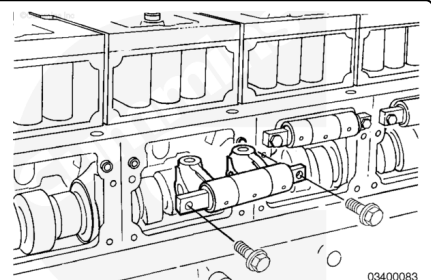

Last Modified: 15-Sep-2006
