


Trainings ▾

Prime

with Mechanically Actuated Injector

⚠ WARNING ⚠

Fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.

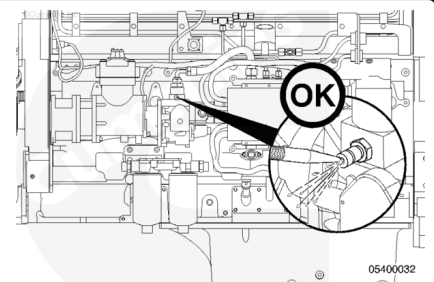

Note : This procedure is normally **only** required when the fuel pump has been changed, the fuel filters are dry, or the fuel system has been drained.


To reduce engine cranking time, depress the quick-disconnect fitting at the fuel pump outlet until fuel is present while cranking the engine.

Note : If the fuel supply pump is dirty, clean the outside of the pump near the fuel inlet and outlet.


While the engine is cranking, loosen the fuel control supply line at the top of the fuel pump. If fuel does **not** come out of the connection, the pump **must** be primed.

Tighten the fuel supply line.


Torque Value: 60 n•m [44 ft-lb]

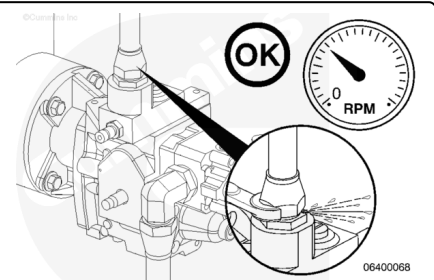


Remove the fuel inlet hose.

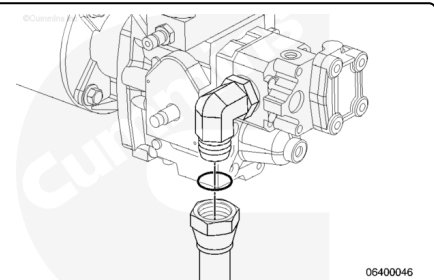

Loosen the fuel pump inlet fitting. Rotate the inlet fitting 180 degrees to point the inlet fitting upward.

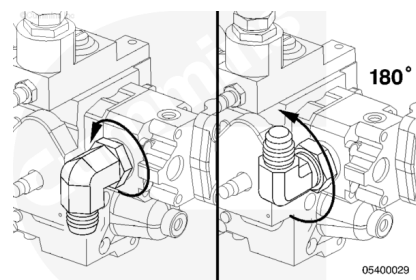


Fill the fuel pump with clean fuel.

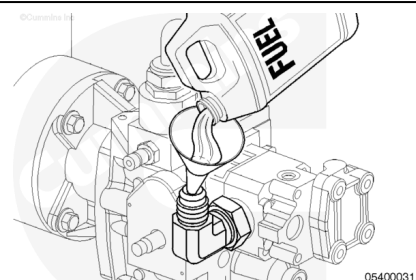

Rotate the fuel pump inlet fitting to its original position.

Tighten the inlet fitting.

Torque Value: 23 n•m [204 in-lb]

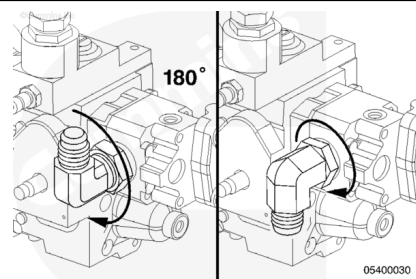

Install the fuel inlet hose to the fuel pump.

Torque Value: 88 n•m [65 ft-lb]

