


Trainings ▾

Remove with Mechanically Actuated Injector

Disconnect the fuel inlet hose (1).

Disconnect the electronic fuel control valve supply hose (2).


Remove and discard the o-rings.

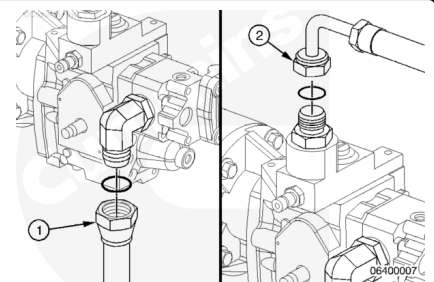

Remove the four mounting capscrews and the fuel pump.


Install the fuel pump drive coupling (3).

Remove and discard the gasket.

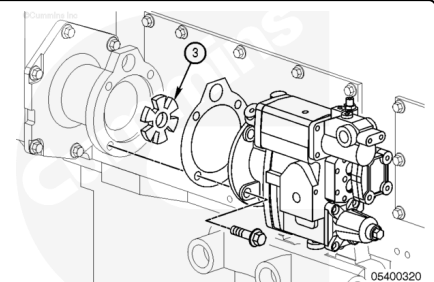


Rail Applications

The lubricating oil scavenge pump (A) **must** be removed prior to removing the fuel pump (B) to allow access to the fuel pump mounting capscrews. Refer to Procedure 007-060 in Section 7. (</qs3/pubsys2/xml/en/procedures/20/20-007-060.html>)

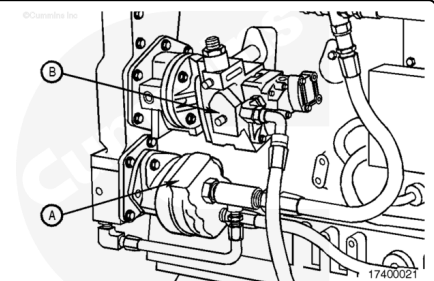


with Electronically Actuated Injector


Disconnect the wiring harness from the fuel pump pressurizing assembly 1 and the injector metering rail 1 pressure sensor.

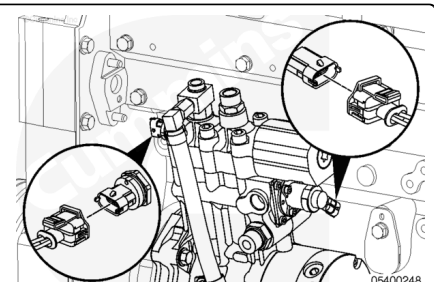

Remove the two capscrews securing the fuel pump support bracket (2) to the support bracket (3) located on the engine block.

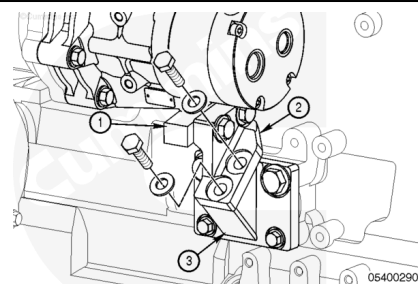


Do **not** remove the support bracket (1) from the fuel pump unless the fuel pump needs to be replaced.

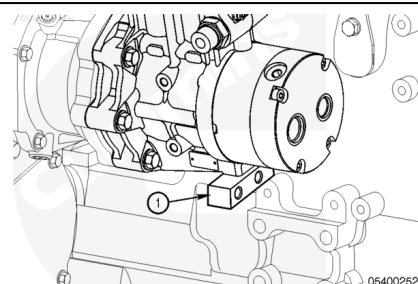

Attach the fuel pump removal and installation service tool, Part Number 4918227, or equivalent.

The fuel pump removal and installation service tool consists of the following:


1. Small lifting connector
2. Lifting bracket
3. Large lifting connector
4. Lifting connector
5. Stop.

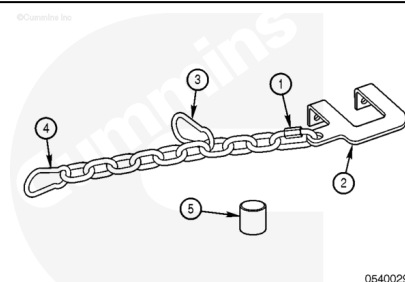


Use the small lifting bracket connector (1) to attach the chain to the top hole of the lifting bracket.

Attach one large lifting connector (3) to approximately the third link of the chain above the bracket. Attach the second lifting connector to the last link of the chain.

Install the bracket onto the fuel pump using two M10 capscrews.

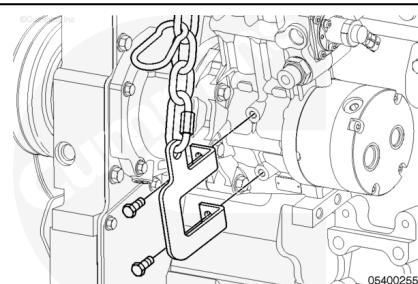


Place the bottom large lifting connector over the fitting boss on the top of the fuel pump. Screw the stop (1) into the fitting on top of the fuel pump until it is hand-tight.

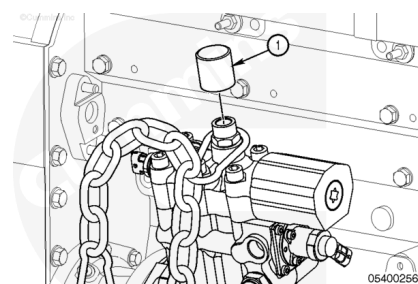

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

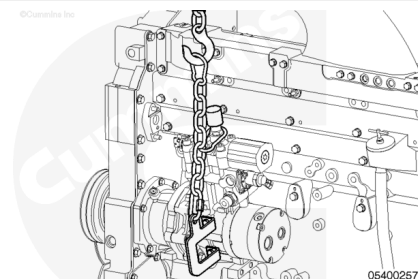


Attach the top large lifting connector to a suitable lifting device (capable of lifting at least 227 kg [500 lb]).

Raise the lifting device until there is no slack in the chain.

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

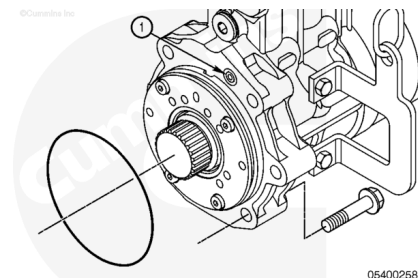

Remove the five capscrews securing the fuel pump.

Remove the fuel pump from the engine with a lifting device. Discard the o-rings which seal the oil supply port (1) and fuel pump to the fuel pump drive.

Plug the oil supply port (1) with a clean plastic plug.

Remove the four capscrews securing the fuel pump support bracket to the engine block.

