


Trainings ▾

Rotation Check


with Mechanically Actuated Injector

If the gear pump can **not** be primed, then check the rotation of the gear pump.


Because the gear pump inlet fitting is located on the side of the gear pump, the fitting can **not** be removed to check the rotation of the gear pump.

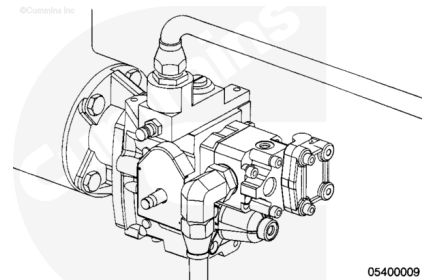

Remove the fuel pump. Refer to Procedure 005-016 (</qs3/pubsys2/xml/en/procedures/20/20-005-016-tr.html>).

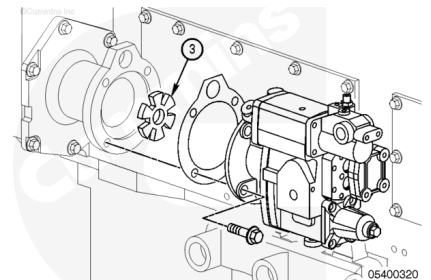


Remove the pulsation damper. Refer to Procedure 005-031 (</qs3/pubsys2/xml/en/procedures/20/20-005-031.html>).

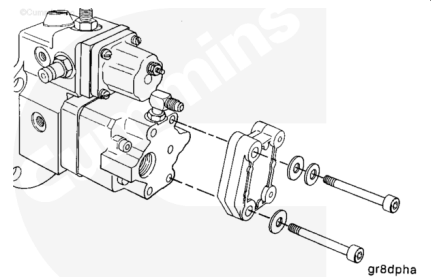


Rotate the fuel pump by hand and check for gear pump rotation.

Note : If fuel pump gears do **not** rotate, replace or repair fuel pump. Refer to Procedure 005-016 (</qs3/pubsys2/xml/en/procedures/20/20-005-016-tr.html>).

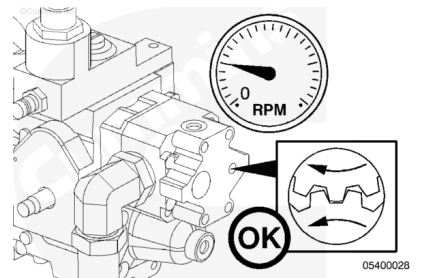

Use a remote starter, Part Number 3376506. Crank the engine and make sure the accessory drive rotates **counterclockwise**.

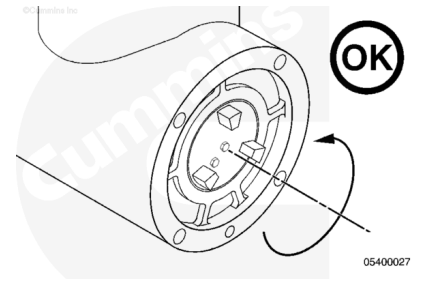

Last Modified: 05-Jul-2006
