


Trainings ▾

Remove

with Mechanically Actuated Injector

Remove the two pulsation damper mounting capscrews.
Discard the o-rings.

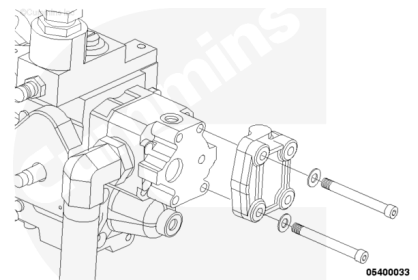


Inspect for Reuse

with Mechanically Actuated Injector

Remove the housing from the cover. Remove the spring steel diaphragm. Discard the o-rings. Inspect the nylon washer and discard it if is damaged.

Check for corrosion, wear, or cracks in the cover or the diaphragm. Replace any damaged parts.

To check the diaphragm for hidden cracks, drop it on a flat hard surface. It **must** have a clear ring sound. If it has a flat sound, replace the diaphragm.

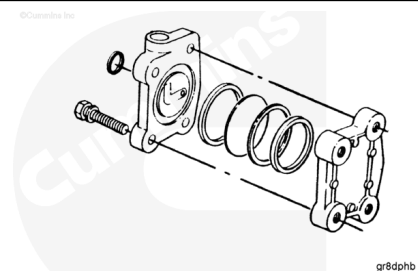

Assemble

with Mechanically Actuated Injector


Install new o-rings in the grooves and a new nylon washer.

Clean the diaphragm. Coat the diaphragm with clean engine oil. Install the diaphragm in the cover.

Assemble the cover to the housing.

Tighten the capscrews.

Torque Value: 18 n•m [159 in-lb]

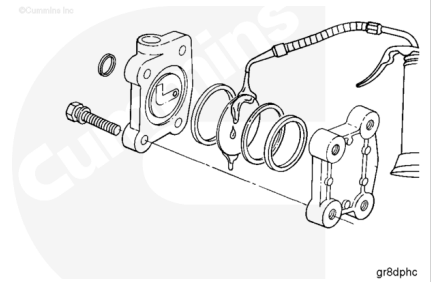

Install

with Mechanically Actuated Injector

Install the damper assembly with a new o-ring on the gear pump.

Tighten the capscrews.

Torque Value: 18 n•m [159 in-lb]

Be careful **not** to let dirt enter the fuel pump.

Check for free rotation of the gear pump.

