

Trainings ▾

Preparatory Steps

with Electronically Actuated Injector

⚠ WARNING ⚠

Fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.



⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the battery cables. Refer to Procedure 013-009 (</qs3/pubsys2/xml/en/procedures/20/20-013-009.html>).
- Remove the fuel supply lines attached to the ECM cooling plate. Refer to Procedure 006-024 (</qs3/pubsys2/xml/en/procedures/20/20-006-024-tr.html>).
- Remove the ECM. Refer to Procedure 019-031 (</qs3/pubsys2/xml/en/procedures/13/13-019-031.html>) in the Troubleshooting and Repair Manual, Electronic Control System, QSK19 CM850, Modular Common Rail System, Engine, Bulletin 4021493.

Remove

with Electronically Actuated Injector

Remove the four capscrews securing the ECM cooling plate to the engine.

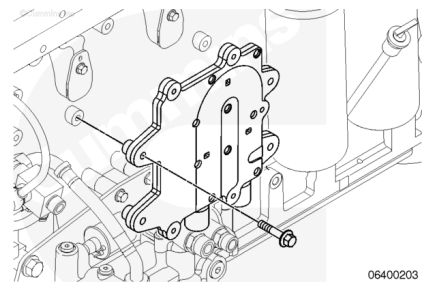


Clean and Inspect for Reuse

with Electronically Actuated Injector

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

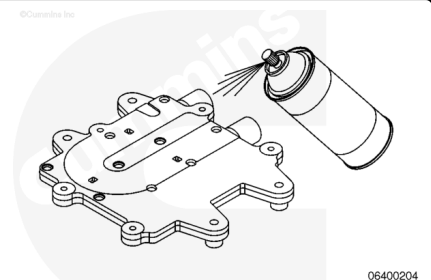

⚠ WARNING ⚠


Some solvents are flammable and toxic. Read the manufacturer's instructions before using.

If the ECM cooling plate fuel connections have been properly protected to prevent dirt from entering the ECM cooling plate, then there is **no** need to clean the cooling plate.

If the ECM cooling plate has been dropped or is dirty, clean it with Cummins® aerosol cleaner, Part Number 3814510, or equivalent.

Do **not** dry with compressed air, allow the cleaner to evaporate completely before installing the fuel supply lines.

Inspect the ECM cooling plate for cracks, damage, and leaks. Replace the ECM cooling plate, if damaged.

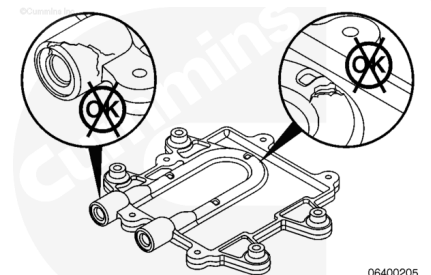


Install

with Electronically Actuated Injector

Install the ECM cooling plate to the engine with four mounting capscrews.

Torque Value: 55 n·m [41 ft·lb]

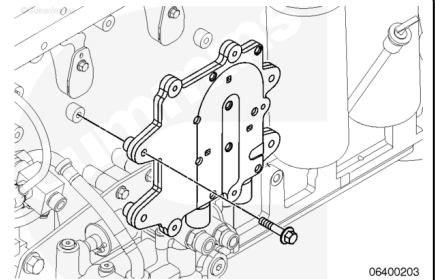

Finishing Steps

with Electronically Actuated Injector

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.



- Install the ECM. Refer to Procedure 019-031 (</qs3/pubsys2/xml/en/procedures/13/13-019-031.html>) in the Troubleshooting and Repair Manual, Electronic Control System, QSK19 CM850, Modular Common Rail System, Engine, Bulletin 4021493.
- Install the fuel supply lines to the ECM cooling plate. Refer to Procedure 006-024 (</qs3/pubsys2/xml/en/procedures/20/20-006-024-tr.html>).
- Connect the battery cables. Refer to Procedure 013-009 (</qs3/pubsys2/xml/en/procedures/20/20-013-009.html>)
- Operate the engine and check for fuel leaks.

