


Trainings ▾

Remove

Rail Applications

⚠ WARNING ⚠

Fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.

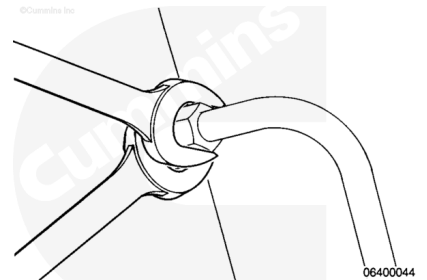


Note : Use two wrenches to remove the fuel hoses.


Support the mating fittings with a wrench. Loosen the fuel hose nuts with the other wrench.

Remove the inlet hose, outlet hose, and o-rings from the fuel filter head.

Remove the four capscrews and the fuel filter head from the bracket.

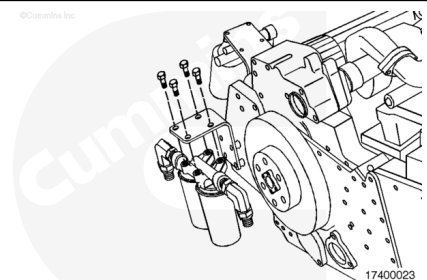

Remove the four mounting capscrews and the bracket from the lubricating oil pan.

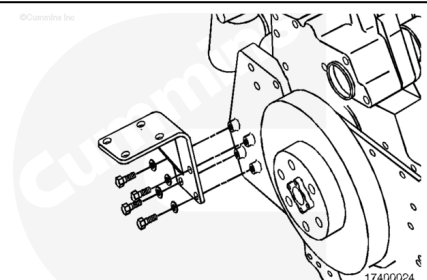

Last Modified: 08-Apr-2009