


Trainings ▾

Remove

with Mechanically Actuated Injector

⚠ WARNING ⚠

Depending on the circumstance, fuel is flammable. When inspecting or performing service or repairs on the fuel system, to reduce the possibility of fire and resulting severe personal injury, death or property damage, never smoke or allow sparks or flames (such as pilot lights, electrical switches, or welding equipment) in the work area.

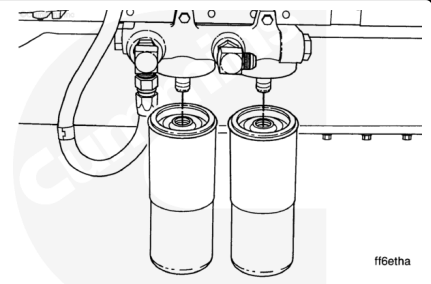

⚠ CAUTION ⚠

Do not spill or drain fuel into the bilge area when disconnecting or removing fuel lines, replacing filter, or priming the fuel system. Do not drop or throw filter elements into the bilge area. The fuel and fuel filters must be disposed of in accordance with local environmental regulations.

Remove the fuel filter with filter wrench, Part Number 3400158, or equivalent.

Remove the thread adapter sealing ring (1).

