


Trainings ▾

Install


with Mechanically Actuated Injector

Install new o-rings on the control valve body inlet fitting and fuel pump outlet fitting. Make sure the o-rings are installed properly.

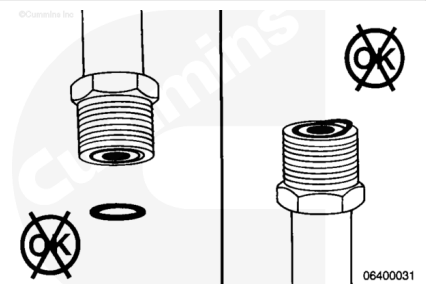


Install and tighten the fuel control valve supply hose.

Torque Value: 61 n•m [45 ft-lb]

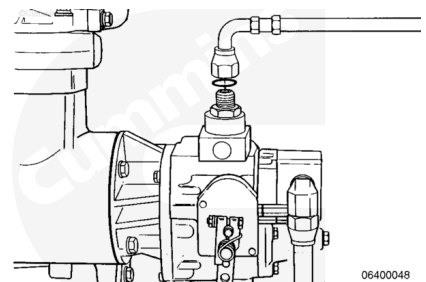


Install new o-rings on the fuel pump inlet line fitting and fuel filter head outlet fitting. Make sure the o-rings are installed properly.

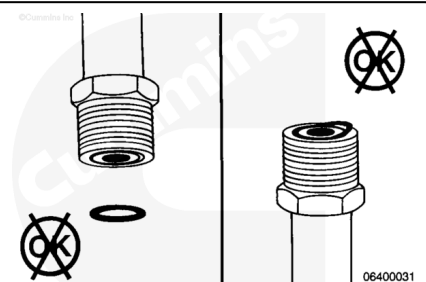

Install the hose at the fuel pump inlet and fuel filter head outlet fitting.


Tighten the hose.

Torque Value: 88 n•m [65 ft-lb]

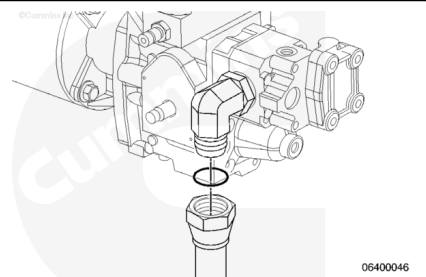


Install and tighten the fuel inlet line that connects the fuel tank to the fuel filter.

Torque Value: 115 n•m [85 ft-lb]

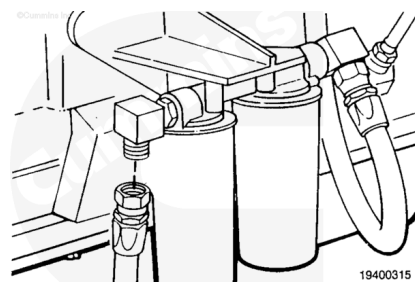


Loosely assemble the fuel tubes and clamps for the fuel rail and timing lines.

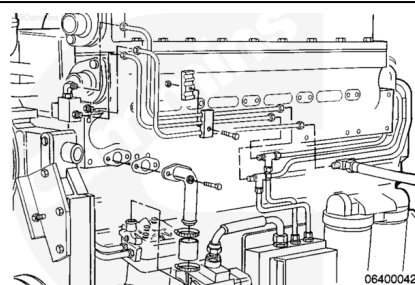

It is a good service practice to use two wrenches when tightening the fuel fittings.


Support the fitting. Use a crowfoot wrench and a torque wrench to tighten the fuel tube nut.

Torque Value: 27 n•m [20 ft-lb]

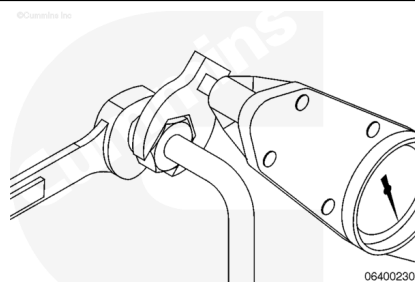

Tighten the fuel tube clamps.


Torque Value: 27 n•m [20 ft-lb]

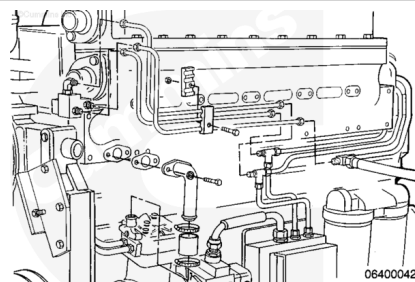


with Electronically Actuated Injector

Install the tee fitting in the top port of the fuel pump by first positioning the locknut.

1. Locknut
2. Washer
3. O-ring.

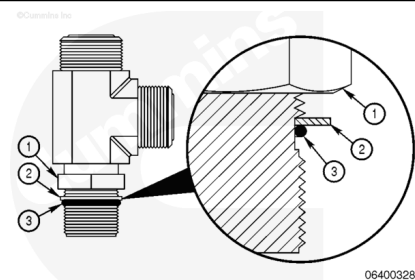


Install the tee fitting in the fuel pump port until the backup washer (1) contacts the port face.

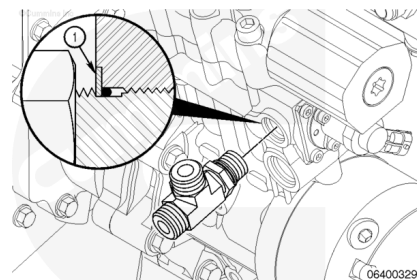


Using two wrenches, hold the tee fitting in the desired position and tighten the locknut.

Torque Value: 95 n•m [70 ft-lb]

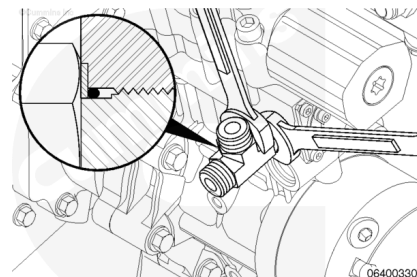


Install the tee fitting in the port on the back of the fuel pump by first positioning the locknut.

1. Locknut
2. Washer
3. O-ring.

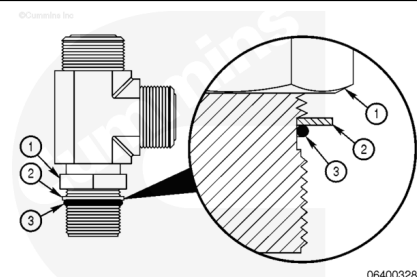


Install the tee fitting in the fuel pump port until the backup washer (1) contacts the port face.

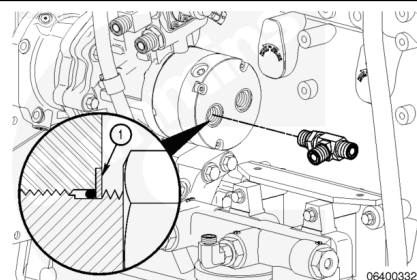


Using two wrenches, hold the tee fitting in the desired position and tighten the locknut.

Torque Value: 95 n•m [70 ft-lb]

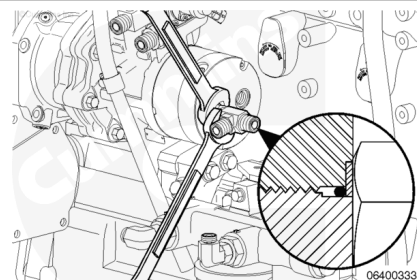


Install new o-rings on the union and install the union in the port next to the inlet actuator.

Torque Value: 95 n•m [70 ft-lb]

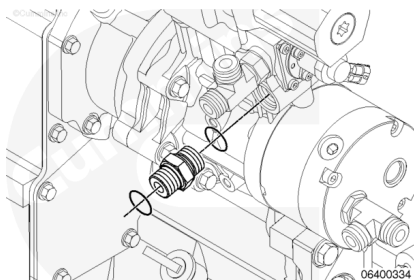


Install new o-rings on the union and install the union in the port on the back of the fuel pump.

Torque Value: 72 n•m [53 ft-lb]

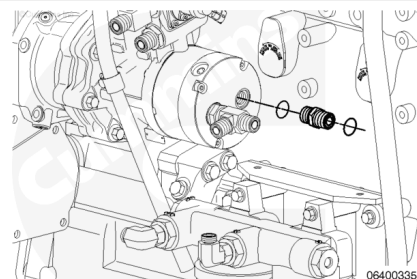


Install the fuel supply line (5) from the back of the fuel pump to the stage 2 fuel filter inlet.

Torque Value: 54 n•m [40 ft-lb]

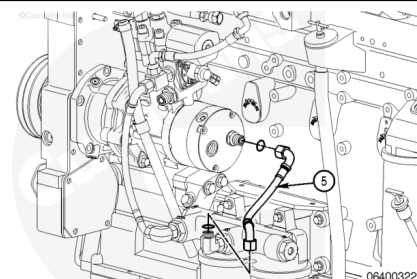


Install the fuel supply line (2) from the tee fitting on the back of the fuel pump to the union next to the fuel inlet actuator.

Torque Value: 65 n•m [48 ft-lb]

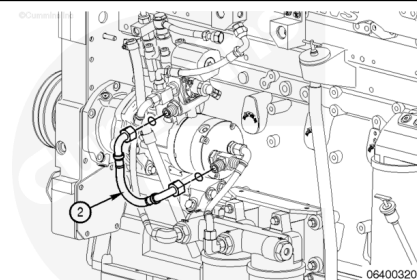


Install the fuel supply line (1) from the second stage fuel filter to the tee fitting next to the inlet actuator.

Torque Value: 45 n•m [33 ft-lb]

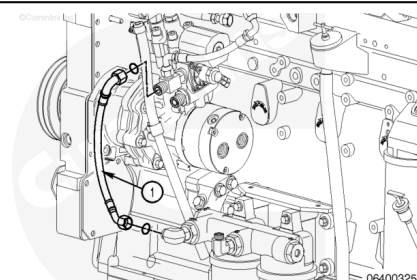

Install the fuel supply line (3) from the tee fitting next to the inlet actuator to the return manifold.

Torque Value: 45 n•m [33 ft-lb]

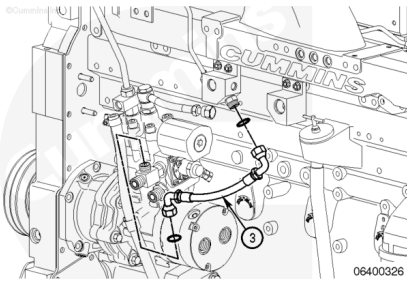

Last Modified: 02-Mar-2007
