


## Trainings ▾

### Remove

#### with Mechanically Actuated Injector

##### **⚠ WARNING ⚠**

Depending on the circumstance, fuel is flammable. When performing any or all of the following procedures to remove fuel supply lines and related components, keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on a fuel system.

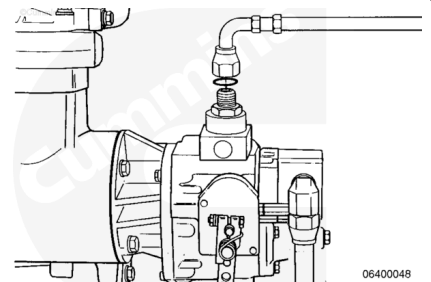

Use two wrenches to remove the fuel tubes and hoses.

Support the mating fittings with a wrench. Loosen the fuel tube nuts with the other wrench.

Loosen the fuel tubing nuts at the fuel junction block on the fuel manifold.

Remove the fuel tube clamps.

Remove the fuel tubing mounting clamp and the fuel tubes.


Remove the fuel control supply hose.

Discard the o-ring.

Remove the hose between the fuel filter head outlet and the fuel pump inlet fitting.

Discard the o-rings.


Remove the fuel inlet line from the fuel tank to the fuel filter.

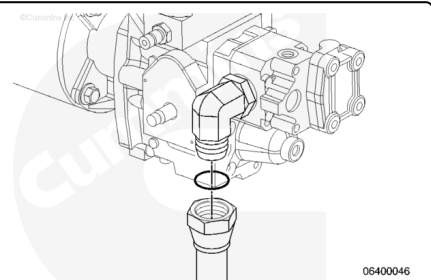

#### with Electronically Actuated Injector


Fuel lines to be removed:

1. Stage 2 filter outlet to inlet manifold
2. Bypass from inlet actuator back to gerotor
3. Air bleed line
4. Fuel supply from fuel inlet manifold
5. Outlet of gerotor pump to stage 2 filter inlet.

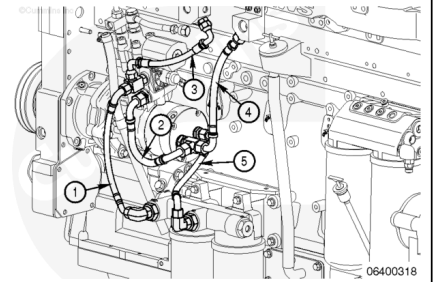

**⚠ WARNING ⚠**

Depending on the circumstance, fuel is flammable. When performing any or all of the following procedures to remove fuel supply lines and related components, keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on a fuel system.

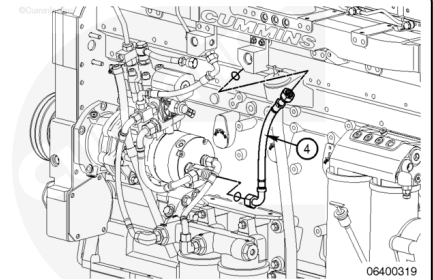


**⚠ CAUTION ⚠**


Very small amounts of dirt and debris can be very harmful to the injectors and the cone seats on the injectors. Extra care is required to keep the fuel connections clean during removal and installation. The fuel supply line(s) must be placed in a plastic bag or connections be covered immediately to keep them clean when removed from the engine. Dirt and debris can cause fuel system damage.

Disconnect the fuel supply line (4) from the elbow union on the fuel filter head assembly and from the tee union on the fuel pump. Discard the o-rings.


Disconnect the fuel supply line (2) from the fuel pump and from the tee fitting on the back of the fuel pump. Discard the o-rings.

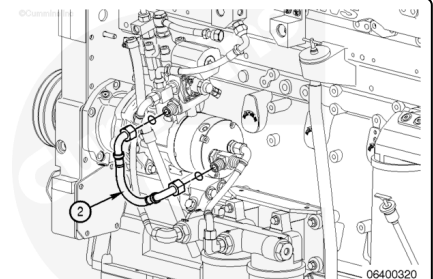


Remove the union from the fuel pump. Discard the o-rings.

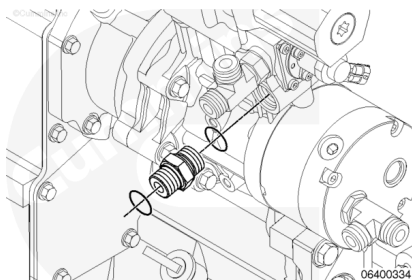


Remove the tee fitting from the back of the fuel pump. Discard the o-rings.

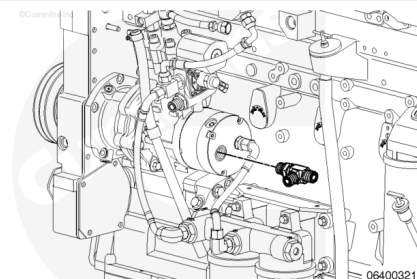


Remove the fuel supply line (5) from the back of the fuel pump and from the stage 2 fuel filter inlet.

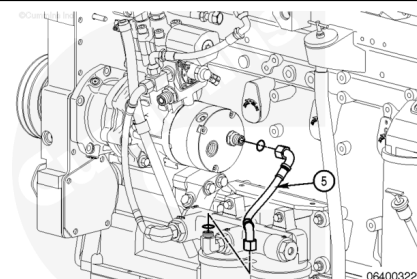


Remove the union from the back of the fuel pump. Discard the o-rings.

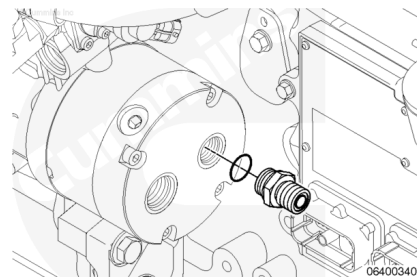

Disconnect the fuel supply line (1) from the fuel filter head union.

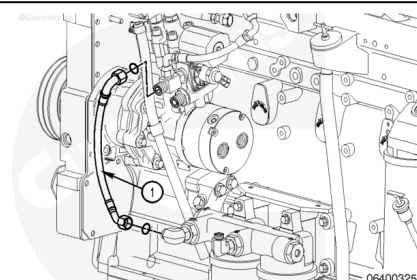

Disconnect the fuel supply line (3) from the tee fitting on the fuel pump and from the fuel return manifold. Discard the o-rings.

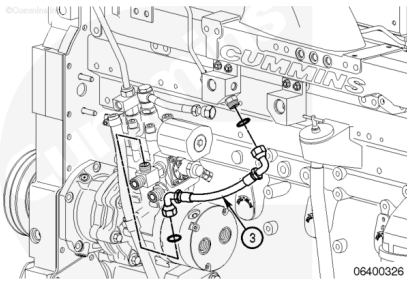

Remove the tee fitting from the fuel pump. Discard the o-rings.

