


Trainings ▾

Install

with Mechanically Actuated Injector


Install the four capscrews to secure the control valve body assembly and the wire harness and brackets.

Torque Value: 45 n•m [33 ft-lb]

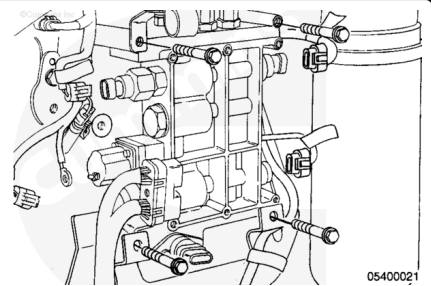

Tighten the nut that holds the electrical connection post on the fuel shutoff valve coil.

Torque Value: 3 n•m [27 in-lb]

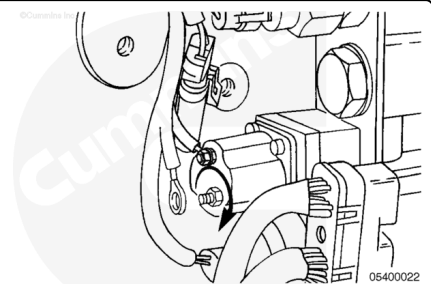


Install the electrical connection on the fuel shutoff valve.

Install the nut on the threaded post of the coil.


Use two 3/8-inch wrenches. Hold the post of the nut firmly while tightening the connection nut.

Torque Value: 2 n•m [18 in-lb]

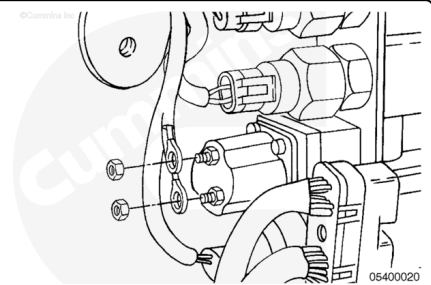


Inspect the actuator and pressure sensor connections for dirt and debris.

Use dielectric lithium grease, Part Number 3822934, and QD® contact cleaner, Part Number 3824510. Clean and lubricate the connections and actuator if cleaning is required.

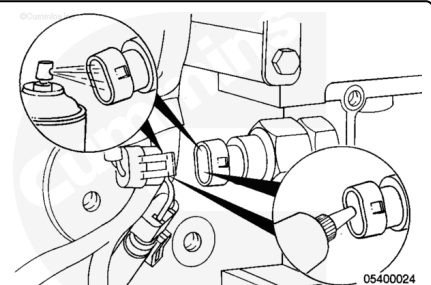

Note : If the electrical connections were not labeled for identification purposes during disassembly, verify the types of connections on the wiring diagram.


Connect the actuator and pressure sensor connections.

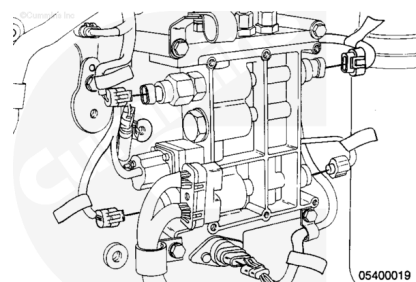

Connect the fuel supply hose (1), the timing rail pressure line (2), and the metering rail pressure lines (3) to the control valve body.

Tighten the fuel supply hose (1).

Tighten the timing pressure (2) and rail pressure lines (3).

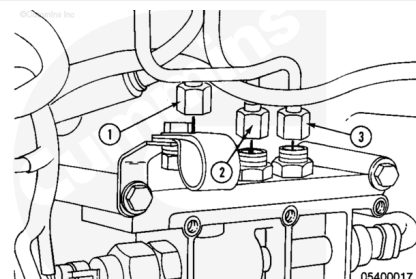

Fuel Supply Hose (1)	61 n.m	[45 ft-lb]
Timing and Rail Pressure Lines (2 and 3)	27 n.m	[20 ft-lb]