


Trainings ▾

Remove


with Mechanically Actuated Injector

Disconnect the fuel supply hose (1), timing pressure line (2), and rail pressure line (3), at the control valve body.

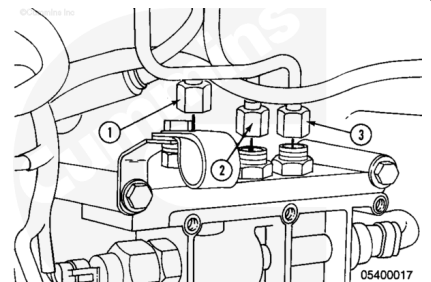


Note : It is a good service practice to label parts during removal. Identification of the connections at time of removal with a label will aid the installation process.


Label the electrical connections to the actuators, fuel pressure sensors, and ambient air pressure sensor.

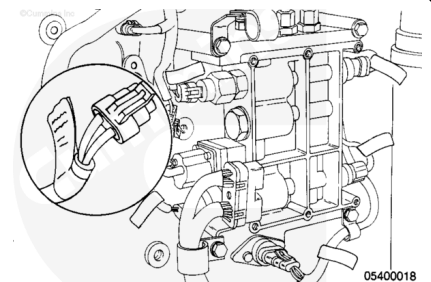

Disconnect the actuators and pressure sensor connections.

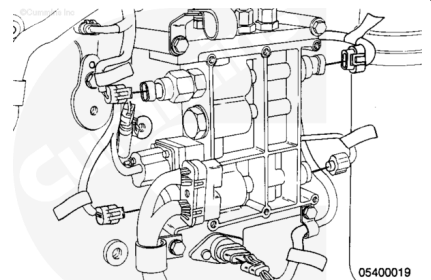


Remove the nut holding the electrical connection of the fuel shutoff valve coil. Remove the connection.

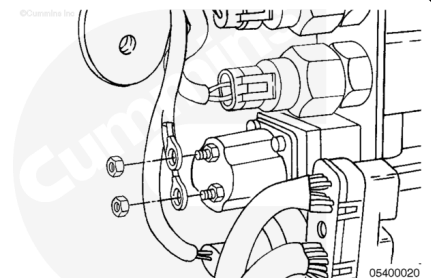

Remove the four mounting capscrews. Move the wire harness and brackets away from the control valve body to gain access.

Remove the control valve body assembly.

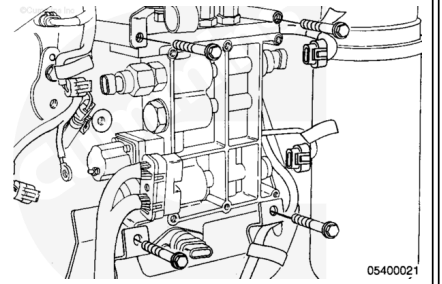

Last Modified: 14-Jul-2006
