


Trainings ▾

Fuel Pressure Relief Valve Return Flow Test with Electronically Actuated Injector

Remove the fuel pressure relief valve drain line from the fuel drain manifold.

Install an M18 plug in the fuel drain manifold.

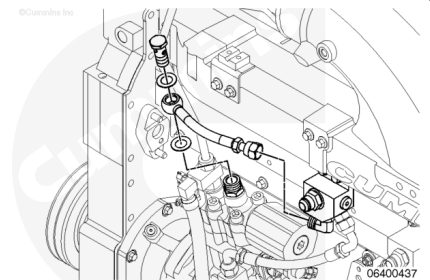


Route the fuel pressure relief valve drain line into a clean container.



Connect INSITE™ electronic service tool and operate the Fuel System Leakage Test.

See the INSITE™ electronic service tool manual for instructions.

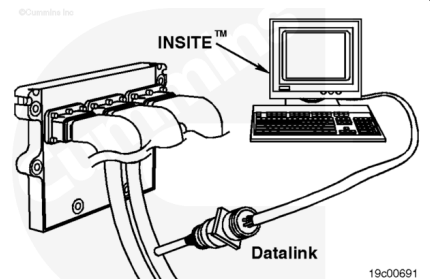

If any leakage is found, replace the fuel pressure relief valve.


If **no** leakage is found the fuel pressure relief valve is operating normally.



Install the fuel pressure relief valve drain line into the fuel drain manifold.

Torque Value:

Banjo Capscrews 48 n•m [35 ft-lb]

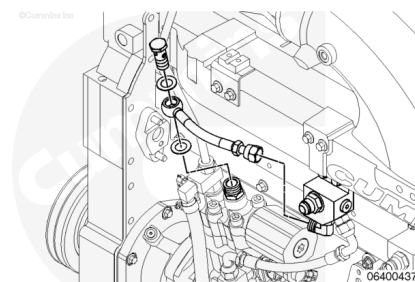


Preparatory Steps

with Electronically Actuated Injector

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

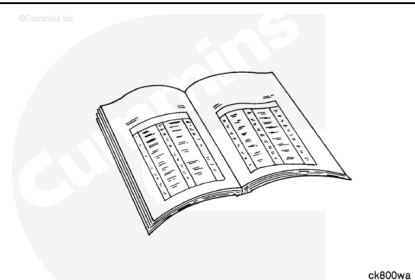

⚠ WARNING ⚠

Depending on the circumstance, diesel fuel is flammable. When inspecting or performing service or repairs on the fuel system, to reduce the possibility of fire and resulting severe personal injury, death or property damage, never smoke or allow sparks or flames (such as pilot lights, electrical switches, or welding equipment) in the work area.

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

⚠ CAUTION ⚠

A very small amount of dirt and debris can be very harmful to the fuel pump. Extra care is required to keep the fuel connections clean during removal and installation. Connections must be covered immediately to keep them clean when components are removed from the fuel pump.

- Disconnect the battery cables. Refer to Procedure 013-009 in Section 13.
(/qs3/pubsys2/xml/en/procedures/99/99-013-009.html)
- Clean the fuel pump and surrounding area and dry with compressed air.
- Disconnect the fuel drain line from the fuel pump. Use a clean plastic plug to protect the fuel drain line port. Refer to Procedure 006-013 in Section 6.
(/qs3/pubsys2/xml/en/procedures/20/20-006-013-tr.html)


Remove

with Electronically Actuated Injector

Note : The fuel pump is equipped with metric fasteners. Use metric size tools for the removal and installation of the valve.

Remove the mechanical dump valve from the fuel pump.

Discard the o-ring.

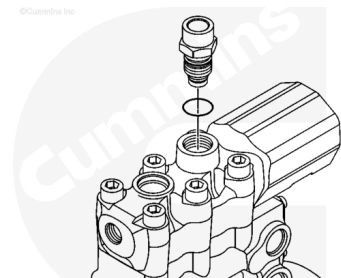


Clean and Inspect for Reuse

with Electronically Actuated Injector

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

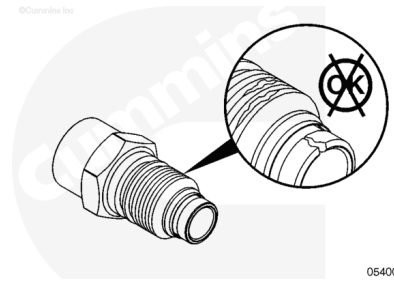

05400269

Clean all parts with electrical contact cleaner, Part Number 3824510, or equivalent.


Inspect the mechanical dump valve for stripped threads, damage, restricted passage, or cracks. Replace the valve, if damaged.

Install with Electronically Actuated Injector

Install the new o-ring on the mechanical dump valve.

Install the mechanical dump valve in the fuel pump.

Torque Value: 135 n·m [100 ft-lb]

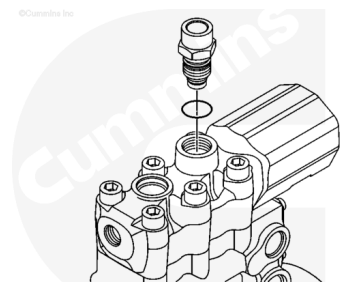


05400260

Finishing Steps

with Electronically Actuated Injector

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

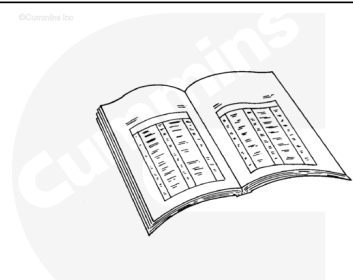

ck800wa

- Remove the plastic plug from the drain and install the fuel return line. Refer to Procedure 006-013 in Section 6. (</qs3/pubsys2/xml/en/procedures/20/20-006-013-tr.html>)

- Connect the battery cables. Refer to Procedure 013-009 in Section 13. (</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>)
- Operate the engine and check for leaks.

Last Modified: 26-Nov-2012
