


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

©Cummins Inc.

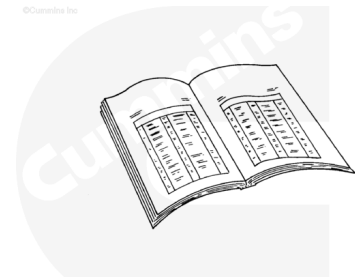

ck800wa

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.


⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

- Disconnect the batteries. Refer to Procedure 013-009 (Battery Cables and Connections) in Section 13. (</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>)
- Thoroughly clean debris from all fittings and components before removal. Be sure that debris, water, steam, or clean solution does not enter the fuel system.
- Use compressed air to dry the fittings and components.


Remove

Disconnect the delta pressure indicator tube from the indicator housing and fuel rail.

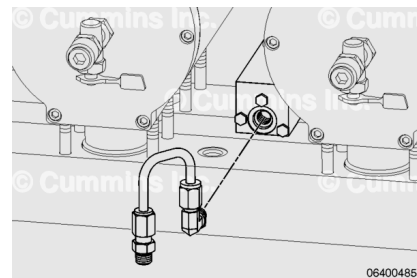

Remove the delta pressure indicator mounting capscrews and indicator housing from the fuel rail.

Discard the o-ring seal.

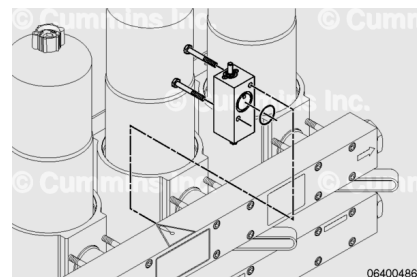

Clean and Inspect for Reuse

⚠ WARNING ⚠


When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

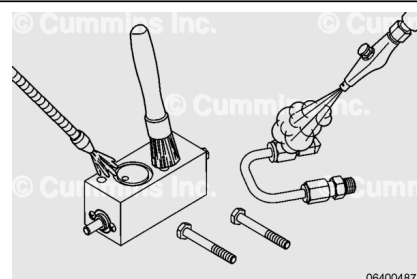

Thoroughly clean the delta pressure indicator components with water, steam, or cleaning solution.

Use compressed air to dry the components.

Inspect the delta pressure indicator for cracks, other damage, and indications of a warped housing.

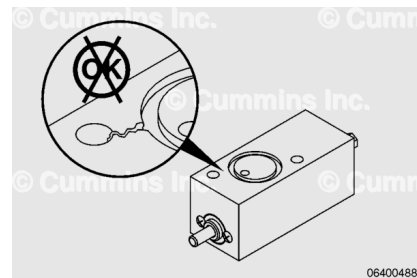


Install

Install a new o-ring onto the delta pressure indicator.

Install the delta pressure indicator onto the fuel rail.

Tighten the capscrews.


Torque Value: 12 n•m [108 in-lb]

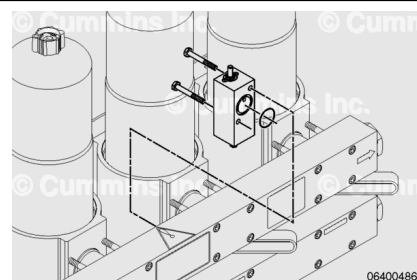

Connect the delta pressure indicator tube onto the indicator housing and fuel rail.

Tighten the tube nuts.

Torque Value: 15 n•m [132 in-lb]

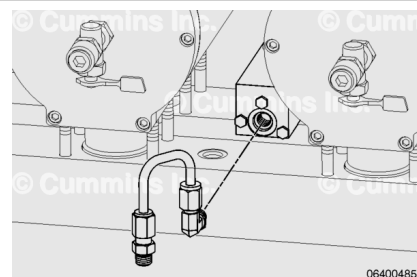

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing,

remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. Refer to Procedure 013-009 (Battery Cables and Connections) in Section 13. (</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>)
- Operate the engine to normal operating temperature and check for leaks.

