

Trainings ▾


Drain

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and can cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. Always use the proper procedures to dispose of the oil.

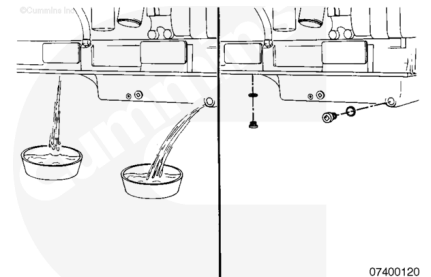

Change the lubricating oil and oil filters at every oil change interval.

Operate the engine until the water temperature reaches 60°C [140°F]. Turn the engine OFF. Remove the oil drain plug.

Drain the oil immediately to be sure all the oil suspended contaminants are removed from engine.

Remove


Clean the area around the oil filter head.

Use an oil filter wrench, Part Number 3376807, or equivalent, and remove the oil filters.

Discard the oil filters if they are **not** needed for a failure analysis.

The o-ring can stick on the filter head. Be sure the o-ring is removed.


Clean the gasket surface of the oil filter head.

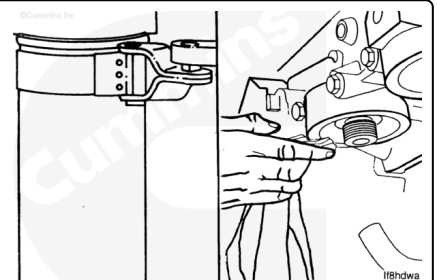

Install

⚠ CAUTION ⚠

Fill the lubricating oil filter with clean lubricating oil. The lack of lubrication during the delay until the filter are pumped full of oil is harmful to the engine.

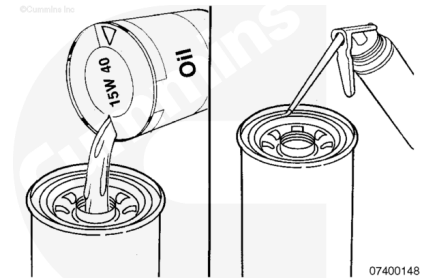


Use the correct oil filter for the engine. See the following procedure for oil filter recommendations. Refer to Procedure 018-024 in Section V.

(/qs3/pubsys2/xml/en/procedures/20/20-018-024-om.html)

Apply a light film of lubricating oil to the gasket sealing surface before installing the new oil filters.

⚠ CAUTION ⚠

Mechanical overtightening can distort the threads or damage the oil filter element seal.

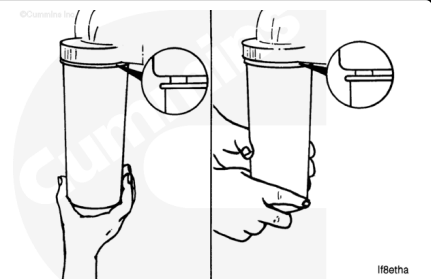


Install the oil filter as specified by the filter manufacturer.

The tightening instructions are normally printed on the outside of the oil filter.

Check and clean the oil drain plug threads and sealing surface.

Install and tighten the oil drain plug.

Torque Value: 100 n•m [75 ft-lb]

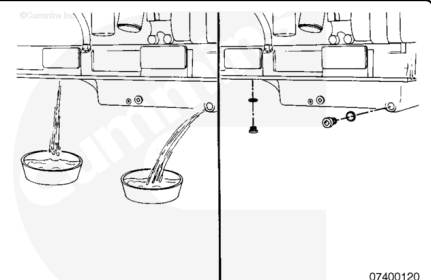


Fill

Use a high-quality 15W-40 multiviscosity lubricating oil, such as Valvoline™, Premium Blue™, or equivalent, in Cummins® engines. Choose the correct lubricating oil for the operating climate, as outlined in the following procedure. Refer to Procedure 018-003 in Section V.
(/qs3/pubsys2/xml/en/procedures/102/102-018-003.html)




Fill the engine with clean lubricating oil to the proper level.

For total system capacity including oil filters, see the following procedure. Refer to Procedure 102-002 in Section 2.
(/qs3/pubsys2/xml/en/procedures/20/20-102-002-om.html)

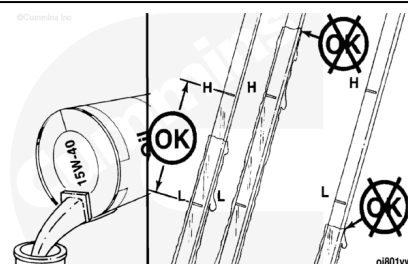

Operate the engine at idle speed.

Inspect for leaks at the oil filter and the oil drain plug.

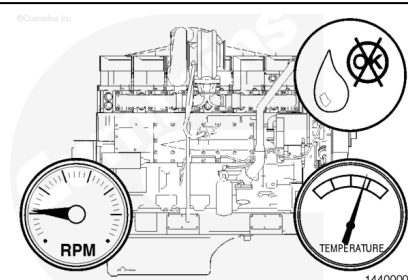

Turn the engine off. Wait approximately 15 minutes to let the lubricating oil drain from the upper parts of the engine. Check the level again.

Add oil as necessary to bring the lubricating oil level to the H (high) mark on the dipstick.

