


Trainings ▾

Remove

Remove the dipstick and dipstick tube.

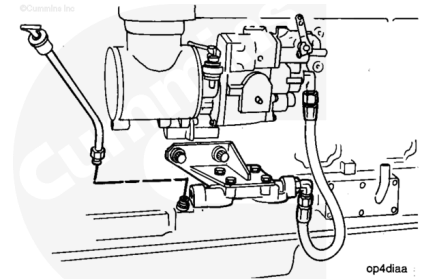

Install

Note : The dipstick tube and fuel filter mounting locations vary depending on the application of the engine.

Install the dipstick tube.

Tighten the nut $\frac{3}{4}$ turn to 1 turn after contact with the ferrule.

