


Trainings ▾

Remove

⚠ CAUTION ⚠

The bypass and combination filters both have the same threads. Verify correct filter is used for replacement to avoid damage to the engine.

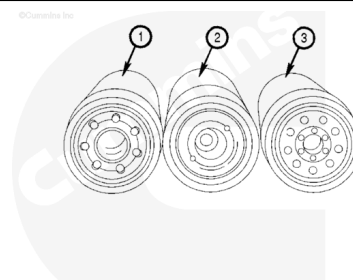


07400059

The external appearance of the full-flow (1), the bypass (2), and the combination (3) filters are the same. The accompanying picture identifies the differences among the three filters.

Note : The full-flow filter contains [1 1/2-16 in] threads. The bypass and combination filters contain [2 1/4-12 in] threads.


A combination oil filter is used on **most** engines. The upper section of the filter contains the full-flow filter element, while the lower section contains the bypass element.

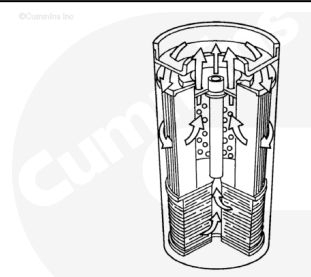

1f1etgc

⚠ CAUTION ⚠

Use caution when draining oil or replacing filters that the oil is not spilled or drained into the bilge area. The oil and oil filters must be disposed of in accordance with local environmental regulations.

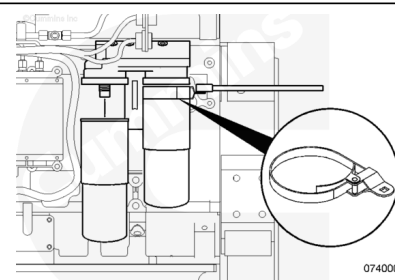

07400045

Note : The following illustrations show the combination oil filter. Use the same procedure when changing the remote bypass oil filters.


Use an oil filter wrench, Part Number 3375049, or equivalent. Remove the oil filters.

Discard the filters if they are **not** needed for a failure analysis.

Install

Clean the head surface of the new filter.


Use engine oil to lubricate the gasket surface of the filters.

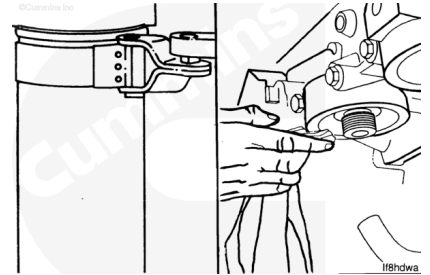

Fill the filters with clean, 15W-40 oil. Install the filters on the oil filter head.

Note : Mechanical overtightening can distort the threads or damage the filter element seal.

Turn the filter until the seal contacts the head. Turn an additional 3/4-turn to 1 turn.

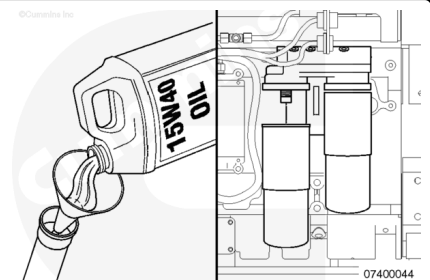

Operate the engine until the oil temperature is at least 65°C [150°F]. Check for leaks.

