


Trainings ▾

Install

Clean the head surface of the new filter.


Use engine oil to lubricate the gasket surface of the filters.

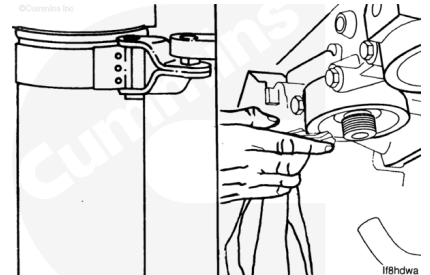

Fill the filters with clean, 15W-40 oil. Install the filters on the oil filter head.

Note : Mechanical overtightening can distort the threads or damage the filter element seal.

Turn the filter until the seal contacts the head. Turn an additional 3/4-turn to 1 turn.

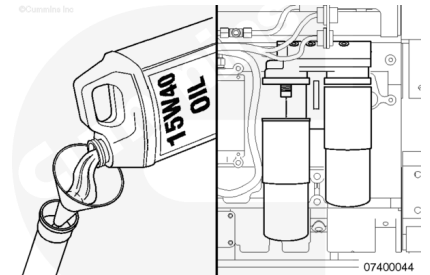

Operate the engine until the oil temperature is at least 65°C [150°F]. Check for leaks.

