

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠


Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

⚠ CAUTION ⚠

Use caution when draining oil or replacing filters that the oil is not spilled or drained into the bilge area. The oil and oil filters must be disposed of in accordance with local environmental regulations.

- Remove the oil filters. Refer to Procedure 007-013 (</qs3/pubsys2/xml/en/procedures/20/20-007-013-tr.html>).

©Cummins Inc.

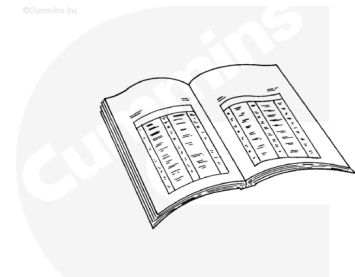


ck800wa

Remove

Threaded

Remove the adapter using a 190.5 cm [$\frac{3}{4}$ -in] square drive tool.

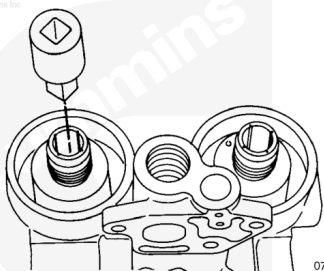


07400332

Plate Type

Remove the four capscrews.

Remove the oil filter head adapter.

Remove and discard the o-ring.

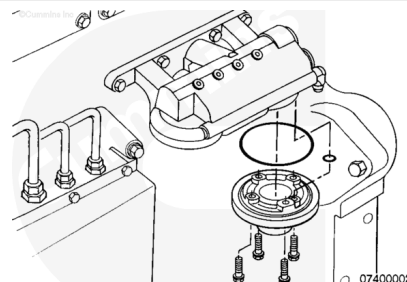

07400002

Clean and Inspect for Reuse

Threaded


⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

Clean the adapter with solvent.

Check the adapter for damage.

If the adapter is damaged, it **must** be replaced.

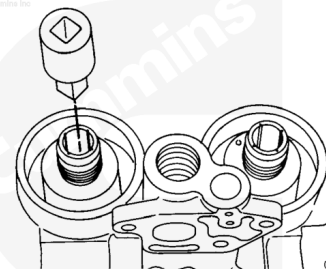


07400332

Plate Type

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

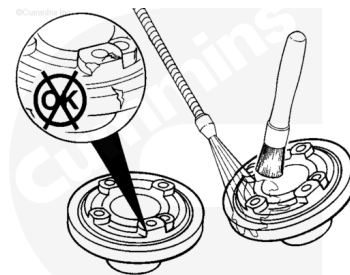

07400003

Clean the adapter with solvent.

Check the adapter for cracks or damage.

If the adapter is damaged, it **must** be replaced.

Install

Threaded

Apply Loctite® 609 or equivalent to the threads of the adapter.

Install the adapter. Use a [$\frac{3}{4}$ -in] square drive tool

Tighten the adapter.

Torque Value: 135 n·m [100 ft-lb]

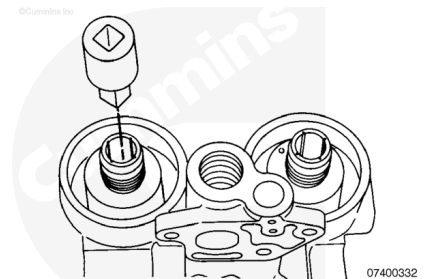


Plate Type

Lubricate the o-ring (1) and install it into the oil filter head prior to installing the adapter.


Lubricate o-rings (2 and 3) and install them into the adapter.

Use the locating pin to align the oil filter head adapter, with the oil filter head, install the adapter.

Install the capscrews.

Tighten the capscrews.

Torque Value: 23 n·m [17 ft-lb]

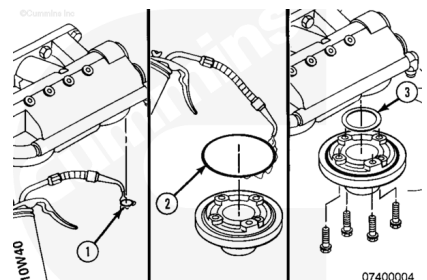

Finishing Steps

- Install the oil filters. Refer to Procedure 007-013 (</qs3/pubsys2/xml/en/procedures/20/20-007-013-tr.html>).
- Operate the engine and check for leaks.



Last Modified: 30-Jun-2006