


Trainings ▾

Inspect

⚠ WARNING ⚠


When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

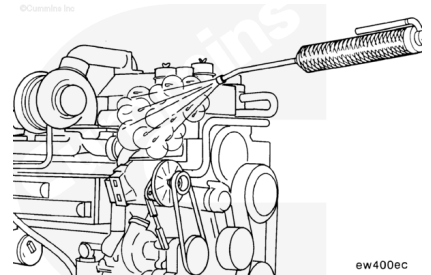


Use a steam cleaner or a high pressure washer to clean the engine.

Operate the engine until the coolant temperature reaches 80°C [176°F]. Inspect the exterior of the engine for leaking gaskets, seals, o-rings, pipe plugs, or fittings.

Before replacing any gaskets, check that the capscrews are tightened to the correct torque values. Refer to Procedure 018-009 (</qs3/pubsys2/xml/en/procedures/99/99-018-009.html>) for the capscrew torque listings.

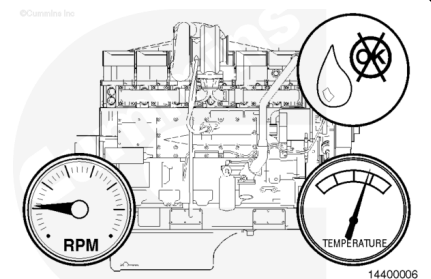


Check for a loose, broken, or missing oil dipstick tube, dipstick, or oil filler cap.

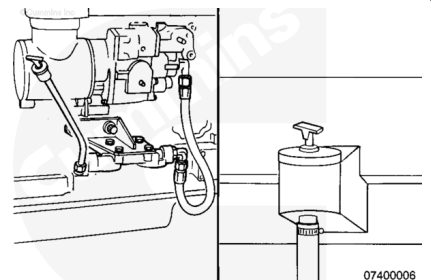

Check the engine crankcase breather elements and breather hose for restriction.


If **not** restricted, check blowby. Refer to Procedure 014-005 (</qs3/pubsys2/xml/en/procedures/20/20-014-005.html>). High blowby can cause gasket and seal leakage.

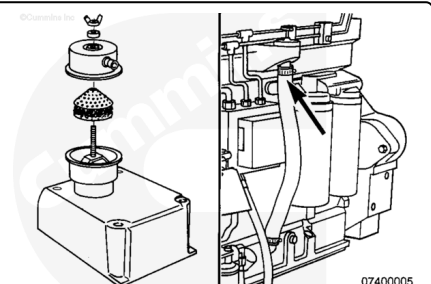


Fluorescent Dye Tracer

Add one unit of Part Number 3376891 Fluorescent Tracer to each 38 liters [10 U.S. gallons] of engine lubricating oil. Refer to Procedure 007-025 (</qs3/pubsys2/xml/en/procedures/20/20-007-025-tr.html>) for oil pan capacity.


Operate the engine at low idle for 10 minutes.

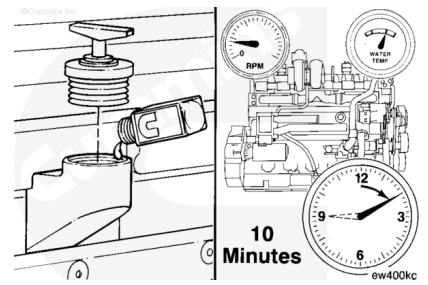

Shut the engine OFF.

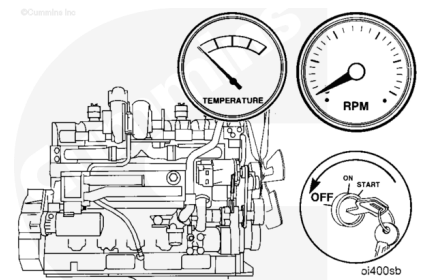

Use a high intensity black light, Part Number 3163337 or equivalent, to inspect for oil leakage. Oil will glow a dark blue color.

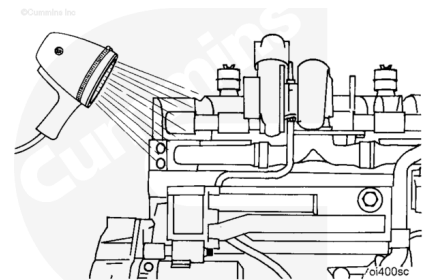

If an oil leak into the coolant is suspected, check the coolant.

