


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

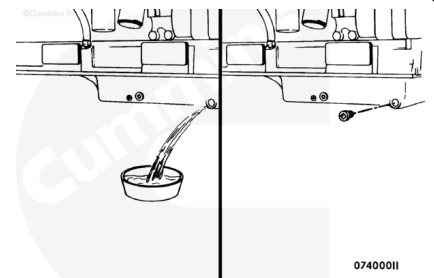

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ CAUTION ⚠

Use caution when draining oil or replacing filters that the oil is not spilled or drained into the bilge area. The oil and oil filters must be disposed of in accordance with local environmental regulations.


- Drain the lubricating oil. Refer to 007-037 (</qs3/pubsys2/xml/en/procedures/20/20-007-037.html>).

Remove

Remove the 18 capscrews.

Remove the lubricating oil pan adapter cover plate.


Remove and discard the gasket.

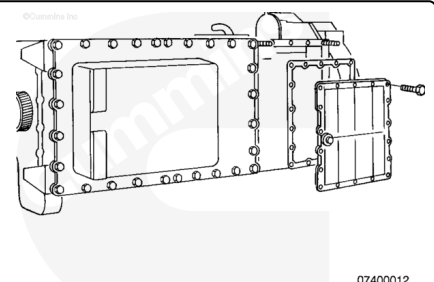

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

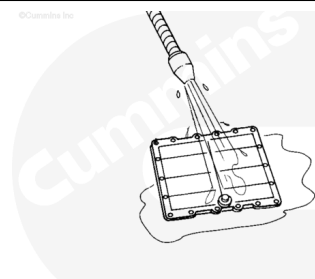

07400013

⚠ CAUTION ⚠

Use solvent that will not harm aluminum. Clean the parts.

Note : The oil pan adapter cover can be made of aluminum or stamped steel. Some older stamped steel covers had stiffening plates that were not permanently attached to the cover. Cummins Inc. recommends the covers with the loose stiffening plates be replaced with a cover made of aluminum or a stamped steel cover that has the plates permanently attached.


Inspect for cracks or other damage.

Repair or replace the lubricating oil pan adapter cover plate if cracked or damaged.

Install

⚠ CAUTION ⚠

Do not use gasket cement. Gasket cement will prevent the gasket from sealing properly.

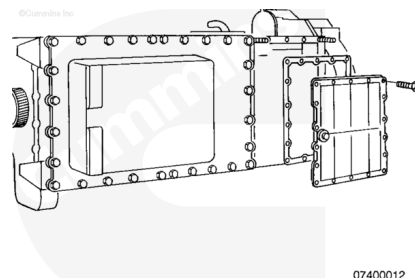

07400012

Use a contact adhesive such as 3M Spray 77 or 3M 4693 to hold the gasket in position.


Install the gasket and oil pan adapter cover.

Install the capscrews.

Tighten the capscrews in sequence.

Use the sequence shown to tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

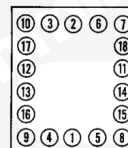

074000014

Finishing Steps

- Install new oil filter elements. Refer to Procedure 007-013 (</qs3/pubsys2/xml/en/procedures/20/20-007-013-tr.html>).
- Fill the engine with lubricating oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/20/20-007-037.html>).
- Operate the engine and check for leaks.



ck800wa