


Trainings ▾


Remove

Disconnect the breather vent from the hand hole cover.

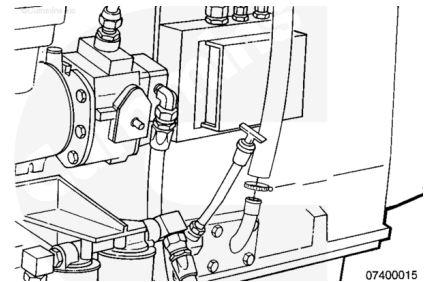


Remove the lubricating oil pan adapter

Remove the two 7/16-14 capscrews and the five 3/8-16 capscrews from the flywheel housing.

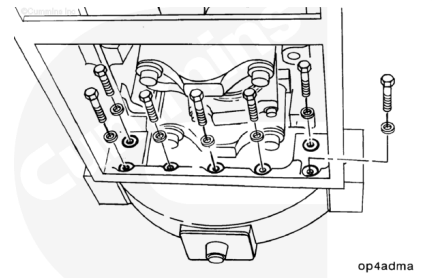

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

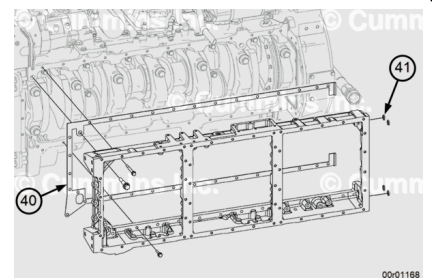

Remove all the capscrews and the pan adapter.

Remove and discard the gasket (40) and the four bolt seals (41) from the adapter.

