


Trainings ▾

Inspect for Reuse


Inspect for the following defects:

- Electrical wiring that is broken
- Sending unit malfunction
- Plumbing that is loose or broken.

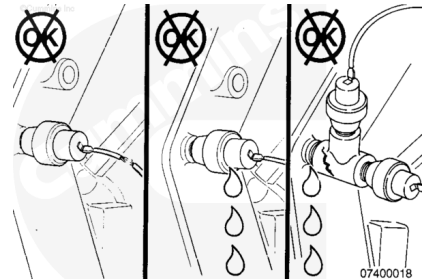

Use a reference gauge of known accuracy to verify the reading of the suspect gauge.

Connect the line from the master gauge at location (1). If this location is **not** accessible, remove one of the three plugs in the lubricating oil filter head (2).

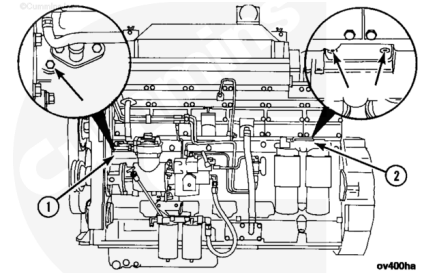

Measurements

	kpa	psi
Minimum Gauge Capacity	830	120

Operate the engine. Compare the pressure reading of the master gauge and the suspect gauge.

The sending unit **must** be replaced if it is defective.