

Trainings ▾

Install

Apply a light coat of grease to the seal ring to hold it in place during assembly.


Install the o-rings and the seal ring onto the pump.

Lubricate the o-rings and bore in the block with vegetable oil.

Install the pump and the capscrews.

Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

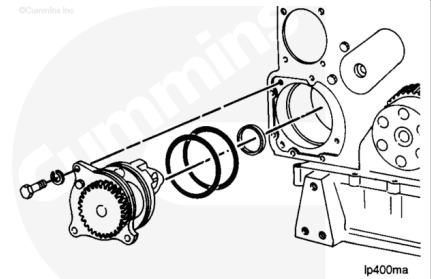

Look between the number one and number two main bearing caps. The seal **must** be visible in the space between the rear of the pump and the engine block.

