

Trainings ▾

Drain

⚠ WARNING ⚠


To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

⚠ CAUTION ⚠

Use caution when draining oil or replacing filters that the oil is not spilled or drained into the bilge area. The oil and oil filters must be disposed of in accordance with local environmental regulations.

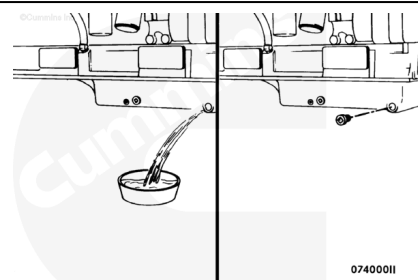

Remove the oil drain plug from the bottom of the lubricating oil pan sump.

Drain the oil from the lubricating oil pan.

Install the drain plug into the lubricating oil pan.

Tighten the drain plug.

Torque Value: 100 n•m [75 ft-lb]

Note : Some engines have an oil pan adapter cover plate that has a drain plug. If the plate has a drain plug, remove the plug to drain the oil from the cover plate. If the cover plate does not have a drain plug it is not necessary to drain the cover plate.


Rail Applications

Remove the lubricating oil pan drain plug.

Drain the lubricating oil from the lubricating oil pan.

Replace the drain plug and tighten.


Torque Value: 100 n·m [75 ft-lb]

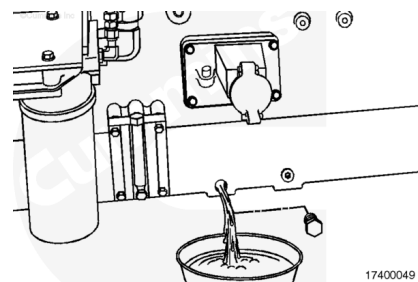


Fill

Add the specified amount of clean 15W-40 lubricating oil to fill the lubricating oil pan. Refer to Procedure 018-017 in Section V. (</qs3/pubsys2/xml/en/procedures/20/20-018-017.html>)

Check the oil level on the dipstick. The level **must** be to the "HIGH" or "H" mark.

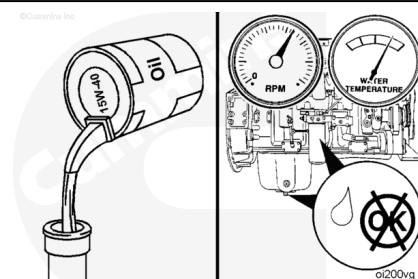

Operate the engine to normal operating temperature and check for leaks.

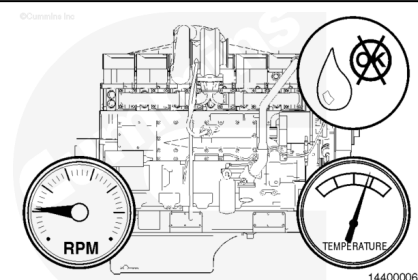

Shut the engine off and wait 10 minutes for the lubricating oil to drain back to the lubricating oil pan.

Check the lubricating oil level. Add oil as necessary to bring the oil level up to the "HIGH" or "H" mark on the dipstick.

