


Trainings ▾

Inspect for Reuse

with Mechanically Actuated Injector

⚠ WARNING ⚠

Some State and Federal agencies in the United States of America have determined that used engine oil can be carcinogenic and can cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. Always use the proper procedures to dispose of the oil.

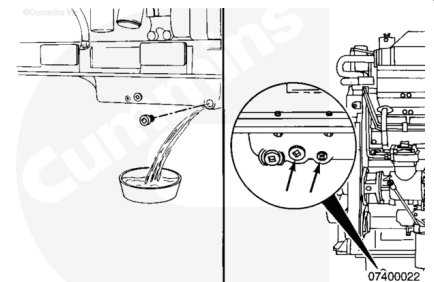

⚠ CAUTION ⚠

Use caution when draining oil or replacing filters that the oil is not spilled or drained into the bilge area. The oil and oil filters must be disposed of in accordance with local environmental regulations.


Drain the oil from the oil pan. Refer to Procedure 007-025 (</qs3/pubsys2/xml/en/procedures/20/20-007-025-tr.html>).

Remove one of the pipe plugs on either side of the oil pan.

Install a reference gauge of known accuracy to verify the reading of the suspect gauge. Use a gauge with a minimum temperature capacity of 150°C [302°F].

Fill the engine with oil. Refer to Procedure 007-025 (</qs3/pubsys2/xml/en/procedures/20/20-007-025-tr.html>).


Operate the engine. Compare the temperature reading of the master gauge and the suspect gauge.

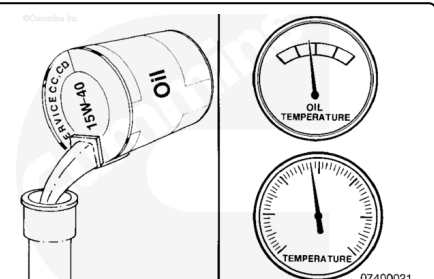

If the suspect gauge does **not** read the same temperature as the reference gauge, check the following for defects.


- Electrical wiring
- Sending unit

Replace the defective parts.

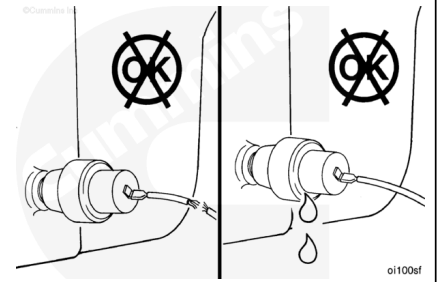

Drain the oil from the oil pan. Refer to Procedure 007-025 (</qs3/pubsys2/xml/en/procedures/20/20-007-025-tr.html>).

Remove the reference gauge. Tighten the plug to specification.

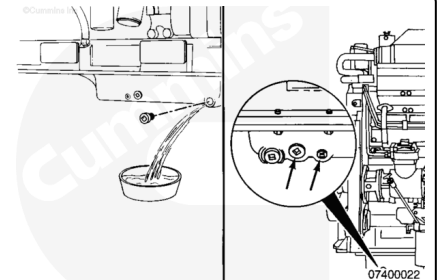

Fill the engine with oil. Refer to Procedure 007-025 (</qs3/pubsys2/xml/en/procedures/20/20-007-025-tr.html>).

Operate the engine to normal operating temperature. Check for leaks.

