


Trainings ▾


Install

Install the converter cooler housing and elements (if equipped). Refer to Procedure 008-065 in Section (</qs3/pubsys2/xml/en/procedures/20/20-008-065-tr.html>)

Install the oil cooler cover and new gasket. Use several capscrews to secure the cover in position, but do **not** tighten the capscrews.

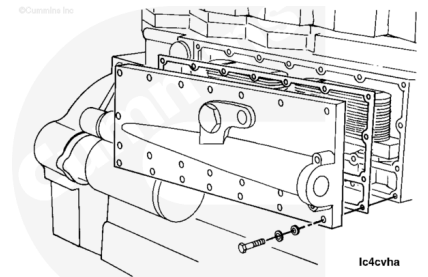

Install the capscrews as shown.

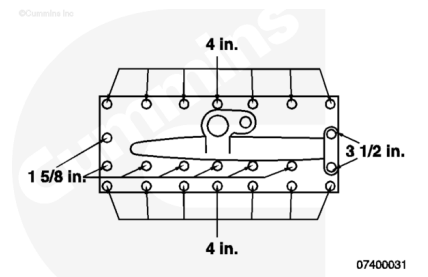

Tighten the capscrews in the sequence shown.

Torque Value: 60 n•m [45 ft•lb]

