


## Trainings ▾

### Remove

Remove the oil cooler cover (if equipped)


Remove all of the capscrews, the oil cooler cover, and gasket.

Discard the gasket.

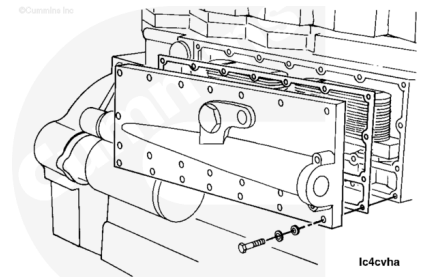

#### **⚠ WARNING ⚠**

**This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift component or assembly.**

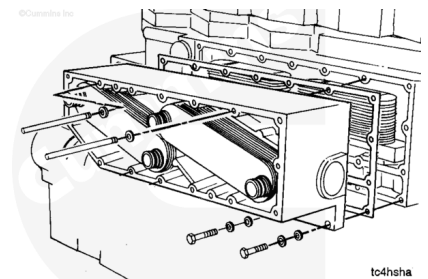

Remove the torque converter cooler housing (if equipped)

Use two [3/8-16 x 12 in] guide studs to support the housing while the capscrews are being removed.

Remove the remaining capscrews, the torque converter cooler housing, and the gasket.

Discard the gasket.

Remove the torque converter cooler elements. Refer to Procedure 008-065 in Section (</qs3/pubsys2/xml/en/procedures/20/20-008-065-tr.html>)

Remove and discard the o-rings.

