


Trainings ▾

Install


Install two guide studs. Put the gasket and housing into position.

Install, but do **not** tighten, capscrews.

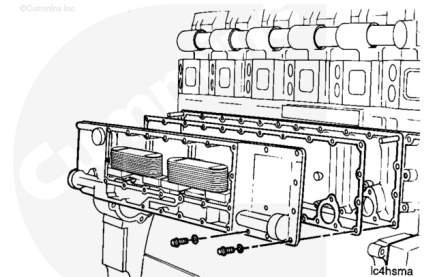

⚠ CAUTION ⚠

The two capscrew holes marked "X" align with cylinder head capscrews. The cylinder head capscrews will be damaged if the cooler housing capscrews are too long.

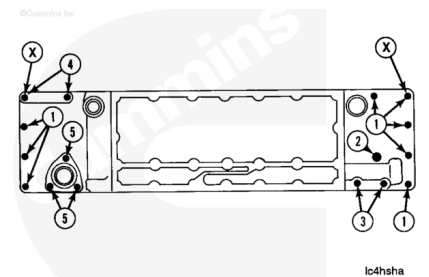

Do **not** tighten the capscrews until the oil cooler cover or torque converter cooler cover is installed.

Install the capscrews as illustrated in the graphic using the table below.

1. 31.750 mm [1.250 in]
2. 44.450 mm [1.750 in]
3. 41.275 mm [1.625 in]
4. 36.830 mm [1.450 in]
5. 41.275 mm [1.625 in]