


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

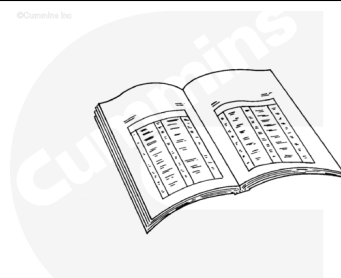

ck800wa

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

⚠ CAUTION ⚠

Use caution when draining coolant that the coolant is not spilled or drained into the bilge area. Do not pump coolant overboard. If the coolant is not reused, it must be disposed of in accordance with local environmental regulations.

- Disconnect the battery cables. Refer to Procedure 013-009 (</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>).
- Drain the coolant. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html>).
- Remove the water pump. Refer to Procedure 008-062 (</qs3/pubsys2/xml/en/procedures/20/20-008-062->


tr.html).

- Remove the starter if it is located on the right side of the engine. Refer to Procedure 013-020 (</qs3/pubsys2/xml/en/procedures/20/20-013-020-tr.html>).
- Remove the oil cooler cover, Procedure 007-045 (</qs3/pubsys2/xml/en/procedures/20/20-007-045-tr.html>), or the torque converter cooler, Procedure 008-065 (</qs3/pubsys2/xml/en/procedures/20/20-008-065-tr.html>), and the marine gear oil cooler Procedure 008-041 (</qs3/pubsys2/xml/en/procedures/20/20-008-041.html>).

Remove


Remove the capscrews and oil cooler housing.

Remove and discard the gaskets.

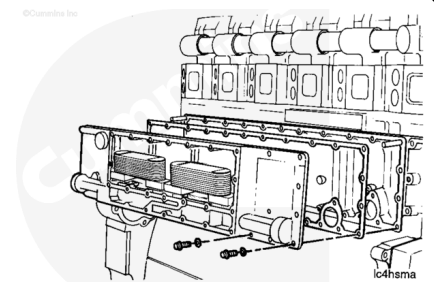

Clean and Inspect for Reuse


Clean and inspect the housing. Check the cast iron housings for corrosion.

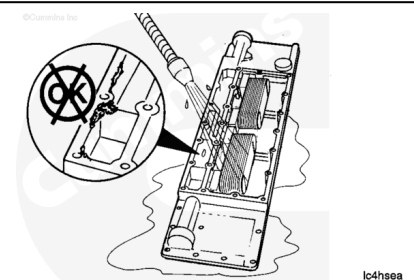

Install


Install two guide studs. Put the gasket and housing into position.

Install, but do **not** tighten, capscrews.

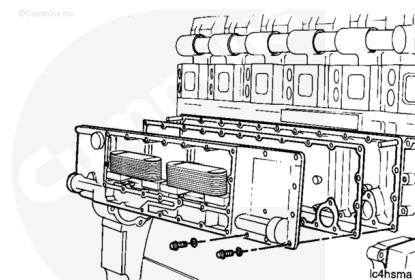

⚠ CAUTION ⚠

The two capscrew holes marked "X" align with cylinder head capscrews. The cylinder head capscrews will be damaged if the cooler housing capscrews are too long.

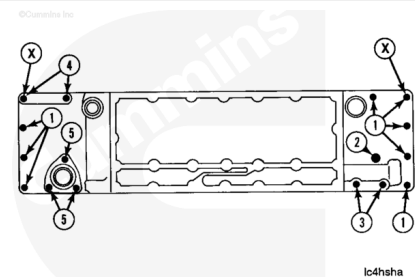

Do **not** tighten the capscrews until the oil cooler cover or torque converter cooler cover is installed.

Install the capscrews as illustrated in the graphic using the table below.

1. 31.750 mm [1.250 in]
2. 44.450 mm [1.750 in]
3. 41.275 mm [1.625 in]
4. 36.830 mm [1.450 in]
5. 41.275 mm [1.625 in]

Finishing Steps

- Install the Oil Cooler Cover, Procedure 007-045 (</qs3/pubsys2/xml/en/procedures/20/20-007-045-tr.html>), or the Torque Converter Cooler, Procedure 008-065 (</qs3/pubsys2/xml/en/procedures/20/20-008-065-tr.html>) or the Marine Gear Cooler, Procedure 008-041 (</qs3/pubsys2/xml/en/procedures/20/20-008-041.html>).
- Install the starter if removed. Refer to Procedure 013-020 (</qs3/pubsys2/xml/en/procedures/20/20-013-020-tr.html>)
- Install the water pump. Refer to Procedure 008-062 (</qs3/pubsys2/xml/en/procedures/20/20-008-062-tr.html>).
- Fill with coolant. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html>)



- Connect the battery. Refer to Procedure 013-009
(</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>)
- Operate the engine and check for leaks.

Last Modified: 30-Jun-2006
