


Trainings ▾

Remove

Rail Applications

Remove the five capscrews, washers, and lubricating oil transfer connection and gasket.

Discard the gasket.

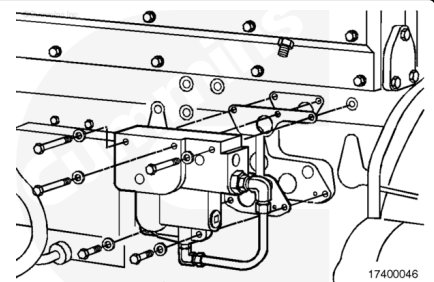


Install

Rail Applications

Note : The transfer connection gasket is the same as the filter head gasket, but the tab on the end of the gasket must be removed prior to installing the new gasket.

Install the gasket, lubricating oil transfer connection, and five washers and capscrews. Tighten the capscrews.

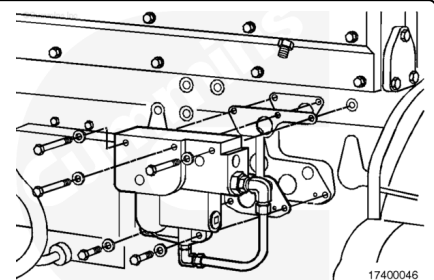

3" capscrew (1 each)	45 n.m	[35 ft-lb]
1 1/4" capscrew (2 each)	45 n.m	[35 ft-lb]
3 3/4" capscrew (2 each)	45 n.m	[35 ft-lb]

