


## Trainings ▾

## Remove


### WARNING

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

Remove the three capscrews, washers, centrifuge cover, and o-ring.

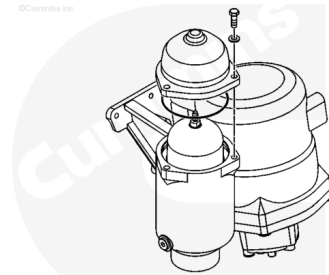


Remove the centrifuge filter from the eliminator housing.

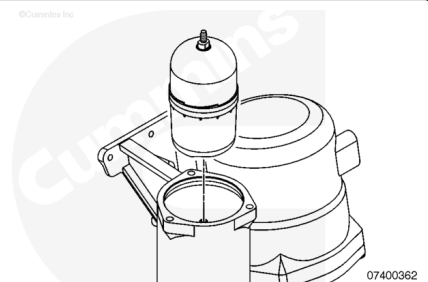


## Inspect for Reuse

Inspect the o-ring for signs of tears or damage. If damage is found, replace the o-ring.

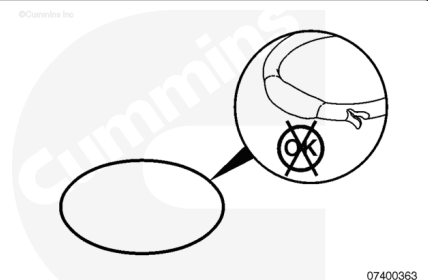

## Install

Install a new centrifuge filter into the eliminator housing.

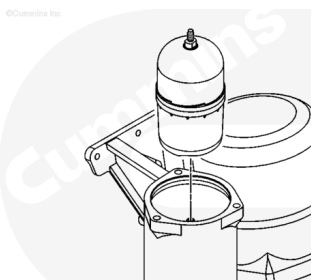


07400362

Install the o-ring into the centrifuge cover. Install the cover, washers, and capscrews.

Tighten the capscrews.

|                               |        |            |
|-------------------------------|--------|------------|
| Eliminator Cover<br>Capscrews | 30 n.m | [22 ft-lb] |
|-------------------------------|--------|------------|

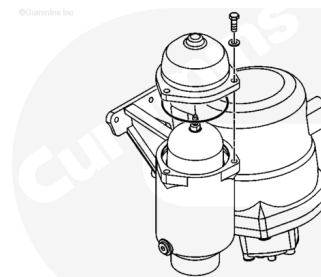

07400361