


Trainings ▾

Remove

Industrial Applications

Remove the two capscrews and washers from the alternator belt guard.


Remove the alternator belt guard.

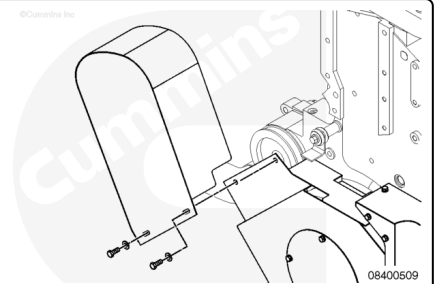

Marine Applications


Remove the three capscrews and washers from the alternator belt guard.

Remove the alternator belt guard.

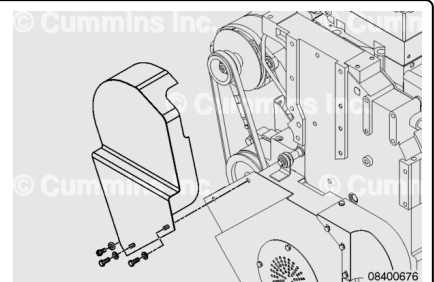


Remove the four capscrews and washers from the accessory drive pulley and the belt guard (if installed). Remove the capscrew, isolator, and spacer.


Remove the belt guard.

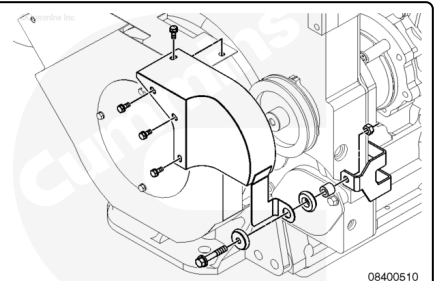

Remove the two mounting capscrews and the belt guard bracket.

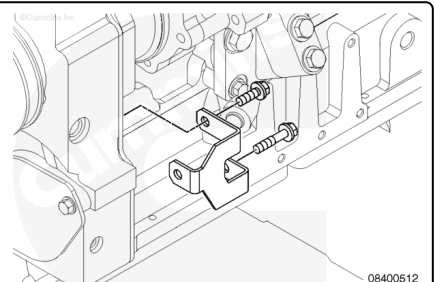

Remove the three capscrews, isolators, and spacer from the upper bracket. Remove the belt guard.

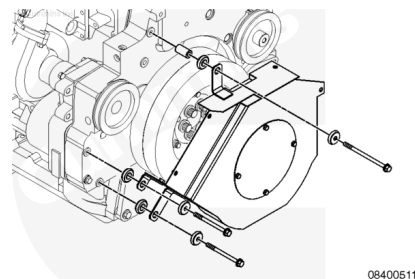


Inspect for Reuse

Industrial Applications

Inspect the belt guard and bracket for cracks or other damage. If damaged, they **must** be replaced.

Inspect the isolators for damage. If the isolators are hard and brittle, they **must** be replaced.

If damaged or bent, replace the belt guard studs.

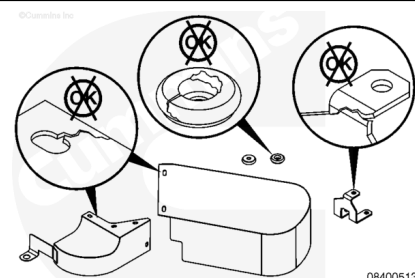

Marine Applications

Inspect the belt guard and bracket for cracks or other damage. If damaged, they **must** be replaced.

Inspect the isolators for damage. If the isolators are hard and brittle, they **must** be replaced.


If damaged or bent, replace the belt guard studs.



Install

Install the belt guard and mounting bracket. Tighten the two capscrews


Torque Value: 40 n•m [30 ft-lb]

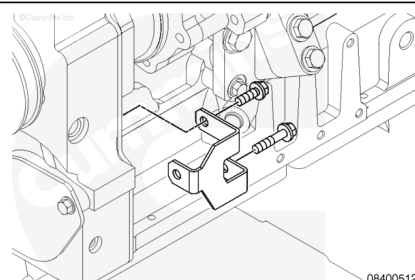

Install the belt guard.

Install the three capscrews, isolators and spacer into the upper bracket.

Torque Value: 25 n•m [221 in-lb]

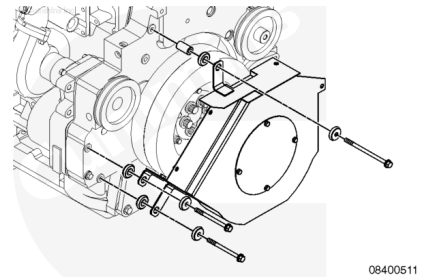


Install the accessory drive pulley and belt guard (if installed).

Install the four capscrews and washers.

Torque Value: 15 n•m [133 in-lb]

Install the one capscrew, isolator and spacer.

Torque Value: 25 n•m [221 in-lb]

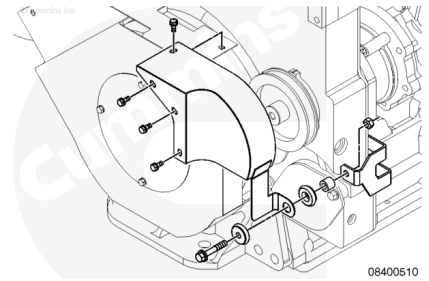


Industrial Applications

Install the alternator belt guard.

Install the two capscrews and washers onto the alternator belt guard.

Torque Value: 15 n•m [133 in-lb]

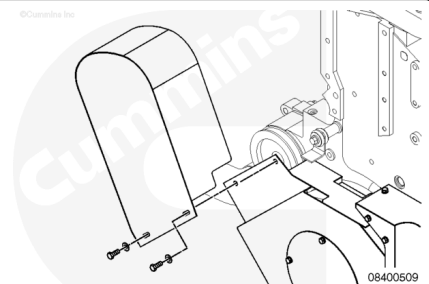

Marine Applications

Position the alternator belt guard.

Install the three capscrews, washers, and isolators.

Torque Value: 15 n•m [133 in-lb]

