


Trainings ▾

Install

Note : The fan belt has 21 grooves. The fan hub and crankshaft pulleys have 22 grooves. Install the belt in the grooves toward the front of the engine. The remaining groove that is not used is to be toward the radiator.

Install the belt.

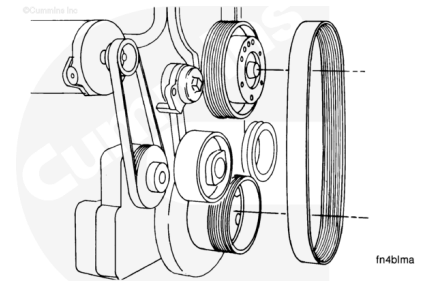

Adjust


Install the belt tension gauge, Part Number 2892563, or equivalent, on the right side of the belt, halfway between the two pulleys.

Loosen the inside nut (2) to the end of the threads.

Pull the belt tensioner until the idler pulley contacts the fan belt.

Tighten the nut (1) finger tight.

Tighten the outside nut (1) to a belt tension gauge reading of 1557 N [350 lbf].

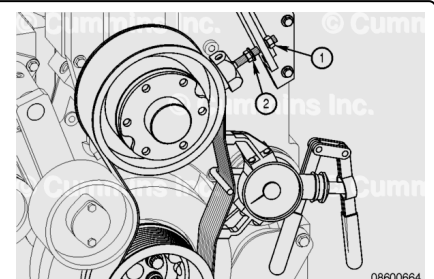


Finger tighten the inside nut (2) flush with the bracket before tightening.

Hold the outside nut (1) and torque the inside nut (2) to specification.

Torque Value: 81 n•m [60 ft-lb]

Bar the engine 360 degrees and recheck the belt tension.


Make sure the tension is still within specification.

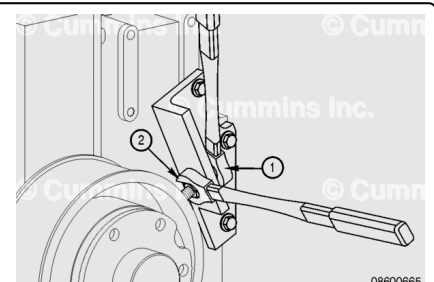

Note : If the belt was **not** replaced, it is **not** necessary to perform this step (belt removed and installed as part of another repair).

Operate the engine for 10 minutes at high idle. Reset the belt tension.

After this procedure, it is **not** necessary to tension the belt again until the belt is replaced.

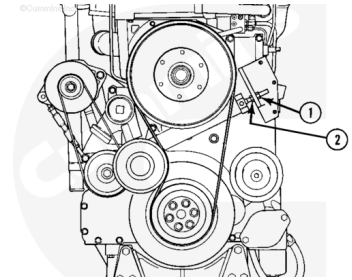

08400007