

Trainings ▾


Install

Note : Do not allow oil to get in the filter. It will break down the SCA.

Lubricate the seal on the filter with engine oil.



Install the coolant filter. Turn the filter until the seal touches the filter head. Turn an additional $\frac{1}{2}$ to $\frac{3}{4}$ of a turn after contact.

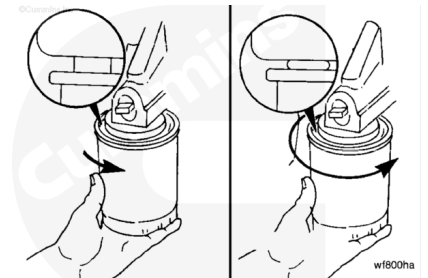

Turn the valve to the ON position.

Operate the engine and check for leaks.

