

Trainings ▾

Remove

⚠ WARNING ⚠


Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

⚠ CAUTION ⚠

Use caution when draining coolant that the coolant is not spilled or drained into the bilge area. Do not pump coolant overboard. If the coolant is not reused, it must be disposed of in accordance with local environmental regulations

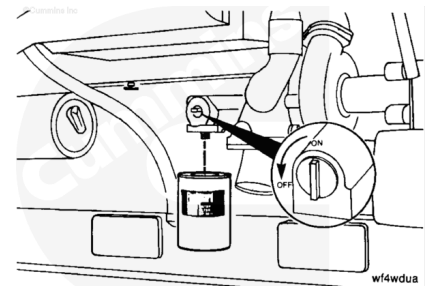


Turn the valve on the filter head to the OFF position.

Remove and discard the coolant filter.


Install

Note : Do not allow oil to get in the filter. It will break down the SCA.

Lubricate the seal on the filter with engine oil.

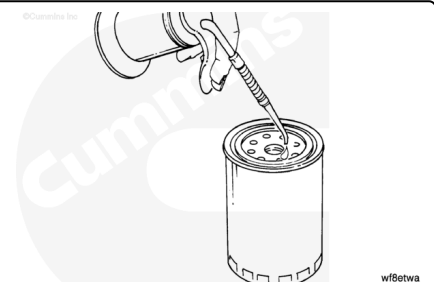

Install the coolant filter. Turn the filter until the seal touches the filter head. Turn an additional $\frac{1}{2}$ to $\frac{3}{4}$ of a turn after contact.

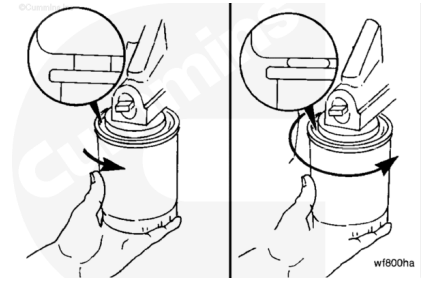

Turn the valve to the ON position.
Operate the engine and check for leaks.

