


Trainings ▾

Preparatory Steps

with Mechanically Actuated Injector

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [122°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

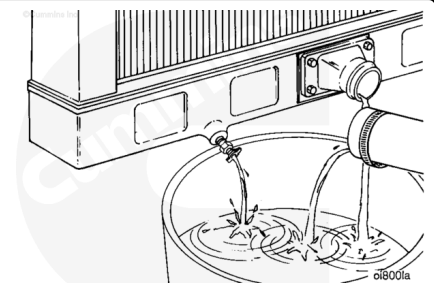

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ CAUTION ⚠

Use caution when draining coolant that the coolant is not spilled or drained into the bilge area. Do not pump coolant overboard. If the coolant is not reused, it must be disposed of in accordance with local environmental regulations.


- Drain the cooling system. Refer to the Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html>).
- Remove the coolant filters. Refer to Procedure 008-006 (</qs3/pubsys2/xml/en/procedures/20/20-008-006-tr.html>).

Remove


with Mechanically Actuated Injector

Disconnect the coolant inlet and outlet hoses from the coolant filter valve fittings.


Discard the face seal o-rings.

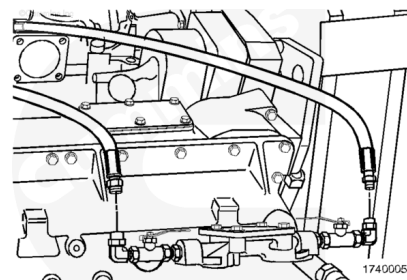

Remove the four capscrews, washers, and coolant filter head from the bracket.

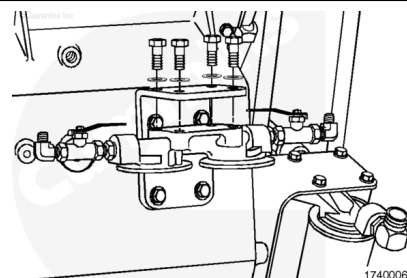


Remove the bracket, four capscrews, and washers from the lubricating oil pan.

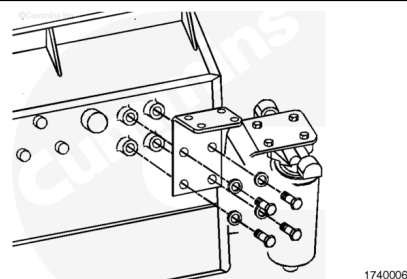


Inspect for Reuse with Mechanically Actuated Injector

Inspect the bracket for cracks or damage.

Inspect the filter head for cracks or damaged threads.

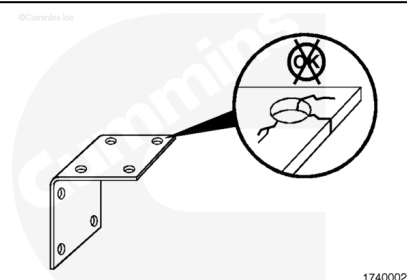

Check the coolant hoses for cracks.

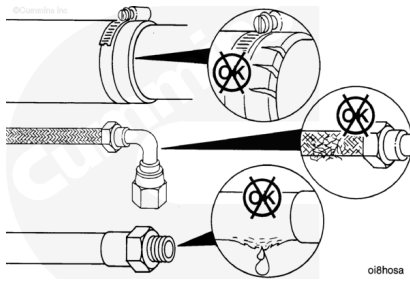


Install

with Mechanically Actuated Injector

Install bracket, capscrews, and four washers to the lubricating oil pan. Tighten capscrews.


Torque Value: 75 n•m [55 ft-lb]

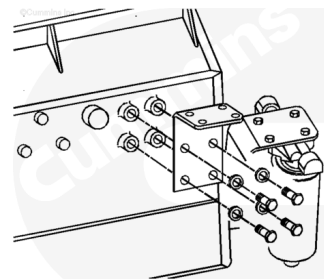

17400061

Install coolant filter head, four capscrews, and washers to the bracket.

Torque Value: 25 n•m [20 ft-lb]

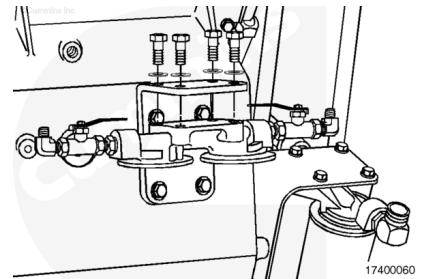


17400060

Install the face seal o-rings.

Connect the coolant inlet and outlet hoses to the coolant filter valve fittings.

Torque Value: 25 n•m [20 ft-lb]

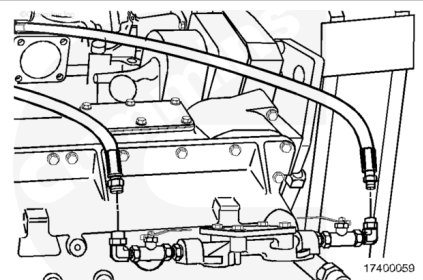

17400059

Finishing Steps

with Mechanically Actuated Injector

- Install the coolant filters. Refer to Procedure 008-006 (/qs3/pubsys2/xml/en/procedures/20/20-008-006-tr.html).
- Fill the cooling system. Refer to Procedure 008-018 (/qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html) and the OEM troubleshooting and repair manual.
- Operate the engine and check for leaks.

