

Trainings ▾

Remove

Industrial Applications


Conventional Aftercooling:

Remove both upper radiator hoses from the thermostat housing.


Remove the coolant bypass tube clip (9).

Loosen both hose clamps.

Remove the coolant bypass tube.

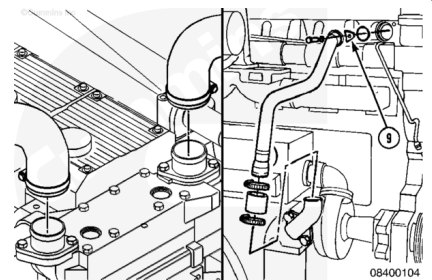


Remove the aftercooler coolant return tube, aftercooler coolant supply tube, gaskets, and hoses from the thermostat housing support.

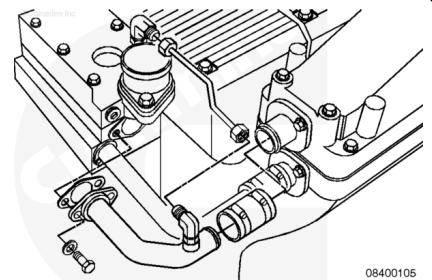

Remove the aftercooler coolant supply tube clip (7). Loosen the hose clamps. Remove the support bracket (34).

Remove the tube (31).

Remove and discard the o-ring.

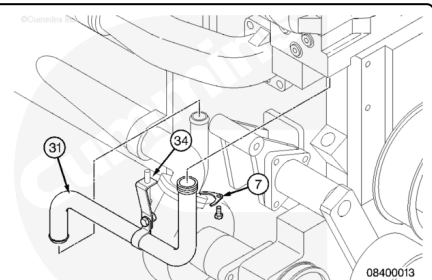


Disconnect the air compressor coolant outlet tube from the thermostat housing.

Remove the four mounting capscrews and the thermostat housing assembly.

Remove the coolant transfer tube.

Remove and discard the two o-rings (19).

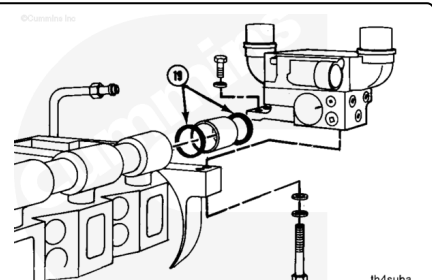


Low Temperature Aftercooling (LTA):

Remove both of the upper radiator hoses from the thermostat housing.

Remove both of the upper LTA radiator hoses from the thermostat housing.


Remove both of the vent hoses from the thermostat housing.

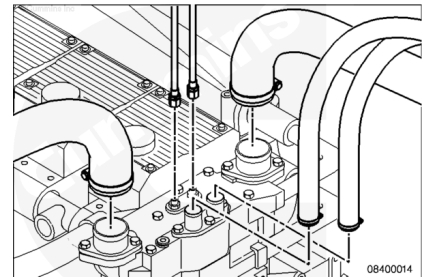

Remove the coolant bypass tube clamp (9).

Loosen both hose clamps.

Remove the coolant bypass tube and hose.

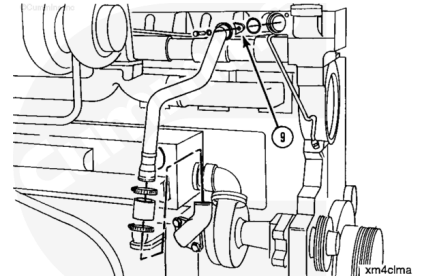

Remove the water inlet and outlet tube clips (7).


Loosen the hose clamps.

Remove the aftercooler coolant tube support bracket (34).

Remove the aftercooler coolant tubes.

Remove and discard the o-rings.

Disconnect the coolant temperature sensor wire (17).

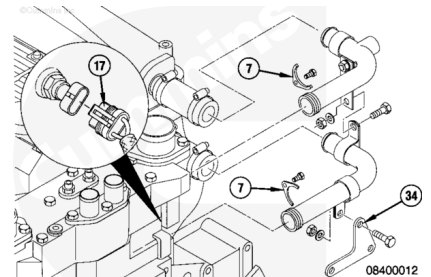


Remove the aftercooler coolant supply tube clip (7).

Loosen the hose clamps.

Remove the support bracket (34).

Remove the tube (31).

Remove and discard the o-ring.

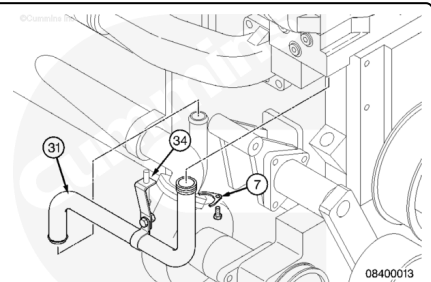


Remove the four mounting capscrews.

Remove the thermostat housing assembly.


Remove the coolant transfer tube.

Remove and discard the two o-rings (19).

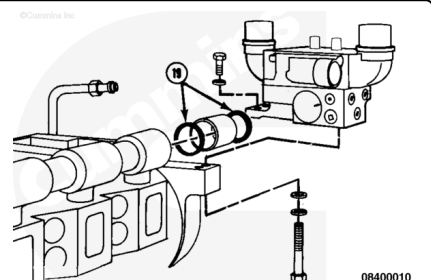


Note : Spacers are used on cast iron gear covers.

Remove the capscrews and spacer.

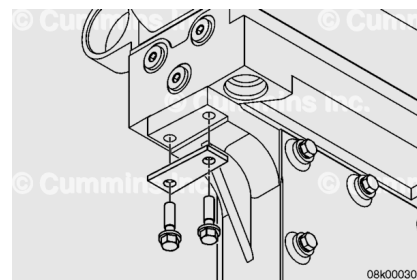


Marine Applications

Disconnect the coolant makeup and vent hoses.

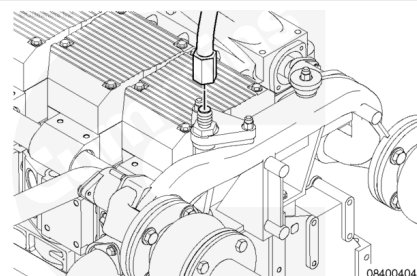


Disconnect the keel cooler supply and return pipes.

Remove the flexible connections, if necessary.

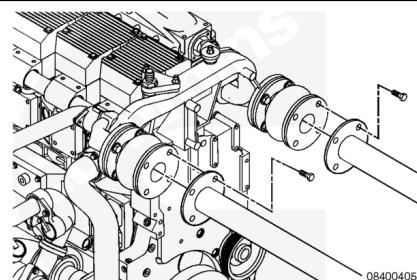


Remove the retaining clips from the water pump inlet pipe at the water pump and at the thermostat housing.

Remove the water pump inlet pipe.

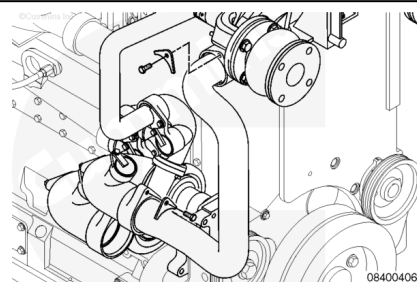


Loosen the retaining clip on the lower end of the LTA supply pipe.

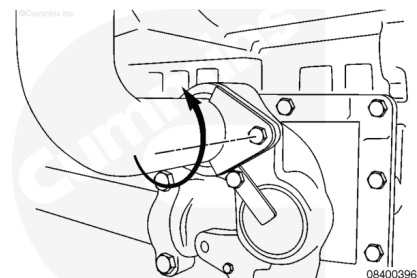


Remove the retaining clip at the thermostat housing and pull the LTA supply pipe out of the thermostat housing.

The pipe will rotate around the lower end.

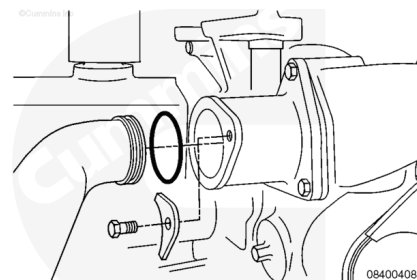


Remove the two capscrews holding the water rail flange to the thermostat housing.

Discard the o-ring.

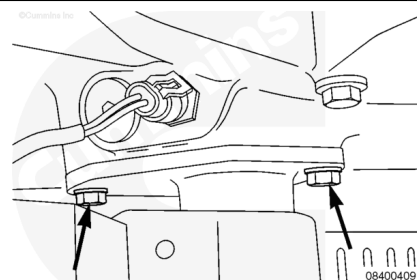


Disconnect the coolant temperature sensor.

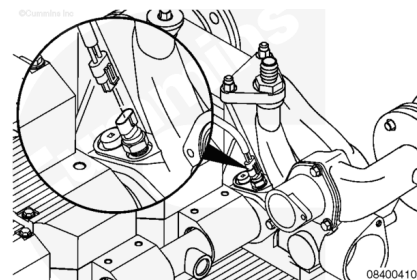

Remove the four capscrews from the aftercooler supply and return tubes.

Discard the o-rings.

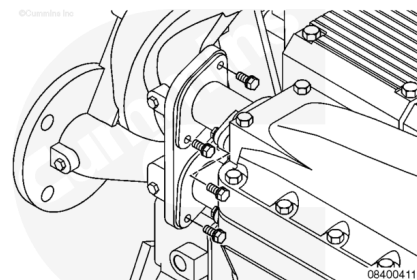

Remove the four capscrews holding the thermostat housing to the gear cover.

Remove the thermostat housing.

