

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ WARNING ⚠


Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

⚠ CAUTION ⚠

Use caution when draining coolant that the coolant is not spilled or drained into the bilge area. Do not pump coolant overboard. If the coolant is not reused, it must be disposed of in accordance with local environmental regulations.

- Drain the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html>).
- Remove the engine and low temperature aftercooler (LTA) thermostats (if equipped). Refer to Procedure 008-013 (</qs3/pubsys2/xml/en/procedures/20/20-008-013-tr.html>).

©Cummins Inc.

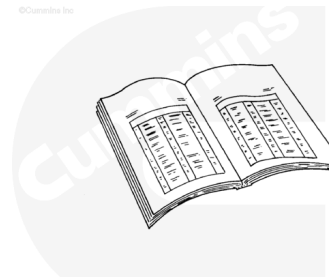


ck800wa

Remove

Industrial Applications

⚠ CAUTION ⚠

Do not damage the thermostat housing when removing the thermostat seals. If housing damage occurs, it will not allow a proper seal, resulting in cooling system failure.

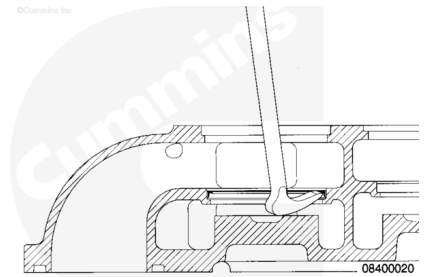


Note : The thermostat housing has a machined counterbore to locate the seals.

Use a rolling head pry bar. Position the pry bar tip under the top flange of the seal and pry upward. Remove the seals from the housing.

Marine Applications

⚠ CAUTION ⚠

Do not damage the thermostat housing when removing the thermostat seals. If housing damage occurs, it will not allow a proper seal, resulting in cooling system failure.

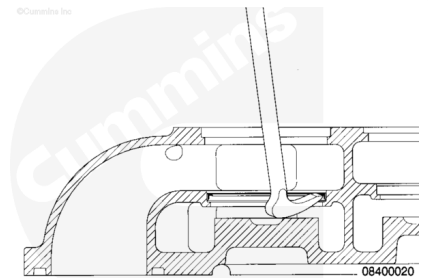

Note : The mechanically actuated injector thermostat housing is shown. Although different in appearance, The electronically actuated injector thermostat seal removal procedure is the same.


Position a rolling head pry bar tip under the top flange of the seal and pry upward to remove the seal.

Install

Industrial Applications

The seal **must** be installed with the part number positioned upward.

Use a mallet and seal driver, Part Number 3824833 or equivalent, or a socket with a diameter the same as the diameter of the seal case to install the seals. Make sure the seals seat in the bottom of the counterbore.

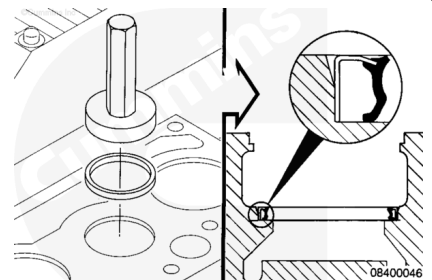


Marine Applications

Note : The mechanically actuated injector thermostat housing is shown. Although different in appearance, The electronically actuated injector thermostat seal procedure is the same.

The seal **must** be installed with the seal lip positioned towards the mandrel.

Use a mallet and seal driver, Part Number 3824833 or equivalent, to install the seal.

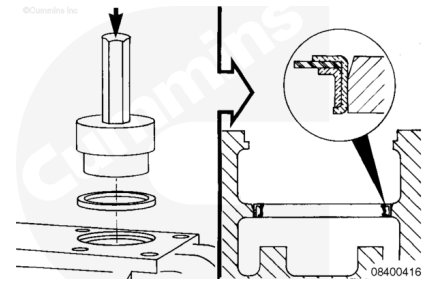

Finishing Steps

- Install the engine and low temperature aftercooler (LTA) thermostats (if equipped). Refer to Procedure 008-013 (</qs3/pubsys2/xml/en/procedures/20/20-008-013-tr.html>).
- Fill the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html>).
- Operate the engine and check for leaks and proper seal function.

