


Trainings ▾

Remove

⚠ WARNING ⚠

This component will rotate. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component

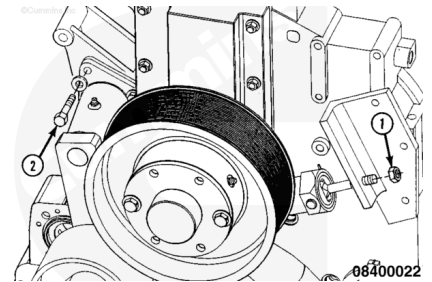

Remove the belt adjusting nut (1) from the tensioner assembly.

Remove the three capscrews (2) from the pivot arm assembly.

Remove the pivot arm and the belt tensioner as an assembly.

Remove the belt tensioner from the idler arm assembly.

