


## Trainings ▾

### Preparatory Steps


Remove the fan belt. Refer to Procedure 008-002 in Section (</qs3/pubsys2/xml/en/procedures/20/20-008-002-tr.html>)

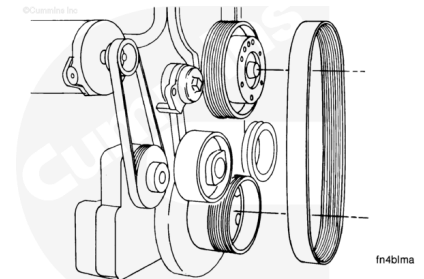

### Remove

#### **⚠ WARNING ⚠**

**This component will rotate. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component**

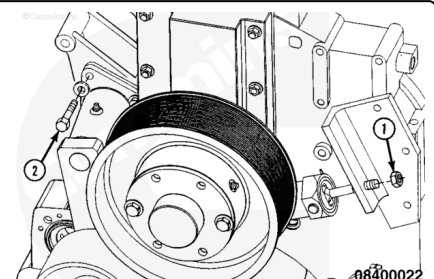


Remove the belt adjusting nut (1) from the tensioner assembly.

Remove the three capscrews (2) from the pivot arm assembly.

Remove the pivot arm and the belt tensioner as an assembly.

Remove the belt tensioner from the idler arm assembly.

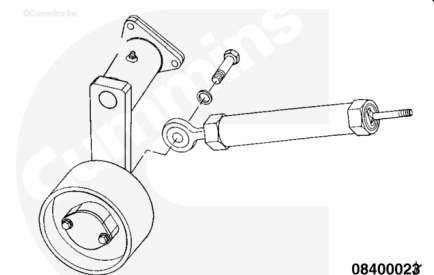


## Inspect for Reuse


Inspect the idler pulley. Rotate the pulley to check for rough bearings. Check the bearing end for clearance.

Inspect the grease seal for damage.

| Bearing End Clearance |     |       |
|-----------------------|-----|-------|
| mm                    |     | in    |
| 0.08                  | MIN | 0.003 |
| 0.25                  | MAX | 0.010 |

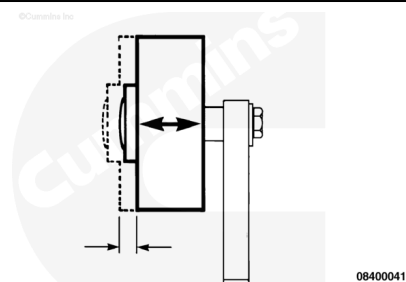


Inspect the belt tensioner assembly for cracks or excessive wear. The part **must** be replaced if worn.

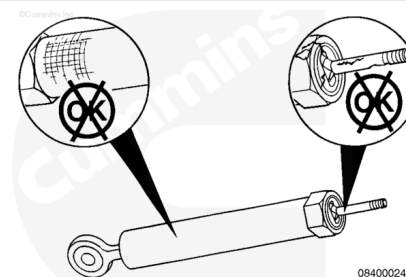

## Install

Install the belt tensioner on the idler arm. Tighten the capscrews.


**Torque Value:** 95 n•m [ 70 ft-lb ]

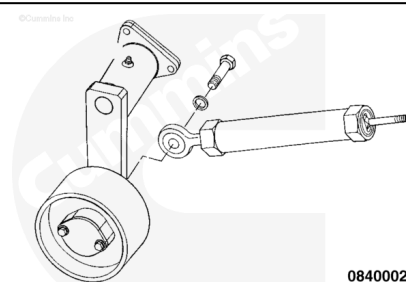

Install the idler arm assembly and capscrews (2). Tighten the capscews.

**Torque Value:** 45 n•m [ 35 ft-lb ]

Install the belt tensioning nut (1). Do **not** tighten the nut.

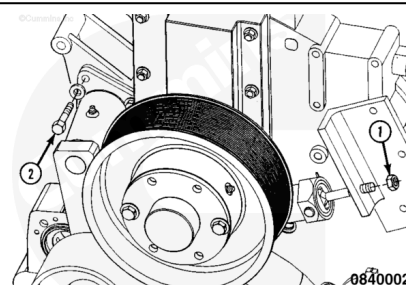

## Finishing Steps

Install the fan belt. Refer to Procedure 008-002 in Section (</qs3/pubsys2/xml/en/procedures/20/20-008-002-tr.html>)

Adjust the belt tension. Refer to Procedure 008-002 in Section (</qs3/pubsys2/xml/en/procedures/20/20-008-002-tr.html>)

