


Trainings ▾

Maintenance Check

⚠ CAUTION ⚠

If the vent plug is not removed, seal and bearing damage will result.

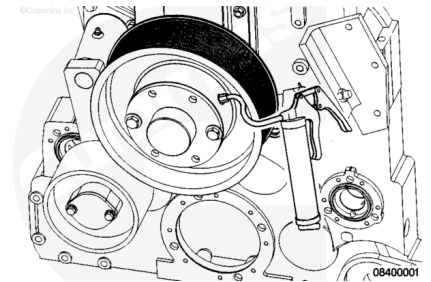

Remove the vent plug from the fan hub grease cavity. Apply grease through the grease fitting until grease comes out of the vent hole.

Use high performance, general purpose industrial-type grease (NLGI Grade Number 2) Chevron™ SRI Grease 2 or Mobilux™ EP 2 grease, or its equivalent, to lubricate the fan hub.

If above greases are **not** available locally, contact a Cummins® Distributor for advice on other Cummins® approved equivalents.

Install the vent plug in the vent hole.

Torque Value: 20 n•m [177 in-lb]