

Trainings ▾

Preparatory Steps

Marine Applications

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.



⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ CAUTION ⚠


Use caution when draining coolant that the coolant is not spilled or drained into the bilge area. Do not pump coolant overboard. If the coolant is not reused, it must be disposed of in accordance with local environmental regulations.

- Drain the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html>).

Remove

Marine Applications


Remove the gear oil cooler. Refer to Torque Converter Cooler Procedure 008-065 (</qs3/pubsys2/xml/en/procedures/20/20-008-065-tr.html>).

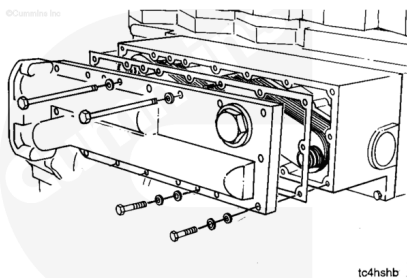

Install

Marine Applications

Install the gear cooler. Refer to Procedure 008-065 (</qs3/pubsys2/xml/en/procedures/20/20-008-065-tr.html>).

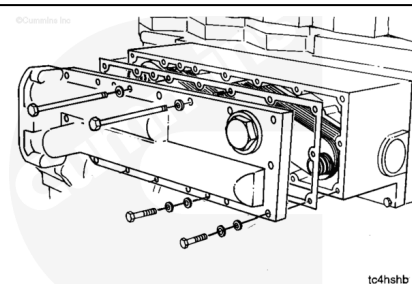

Finishing Steps


Marine Applications

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ CAUTION ⚠

Use caution when filling coolant that the coolant is not spilled into the bilge area. Do not pump coolant overboard. If the coolant is not reused, it must be disposed of in accordance with local environmental regulations.

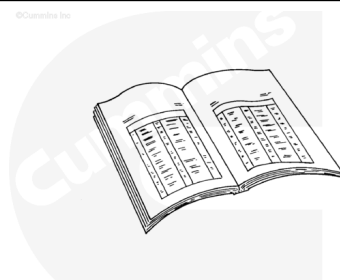

- Fill the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html>).

- Operate the engine and check for leaks.

Last Modified: 30-Jun-2006
