


Trainings ▾

Maintenance Check

⚠ CAUTION ⚠

Wear appropriate eye protection and face protection when using compressed air. Improper use can cause bodily injury from flying debris and dirt.

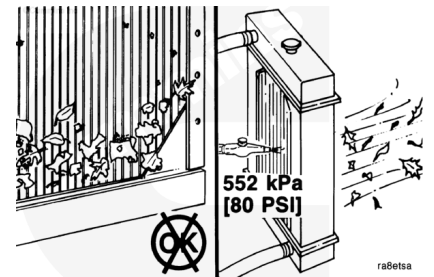

Visually check for plugged radiator fins.


Use compressed air to blow out the dirt and debris. Blow the compressed air **opposite** the direction of the fan air flow.

Measurements

	kpa	psi
Air Pressure	552	80


Check for bent or broken fins. Check for radiator core and gasket leaks.

If the radiator **must** be replaced, refer to the manufacturer's replacement procedures.

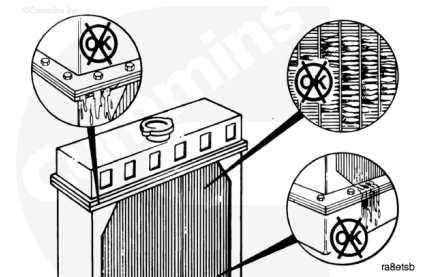

⚠ WARNING ⚠

If a liquid refrigerant system must be removed before removing the radiator, wear eye and face protection. Wrap a cloth around the fittings before removal. Liquid refrigerant can cause serious eye and skin injury.

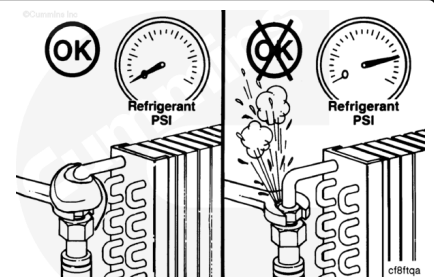


For environmental protection, federal regulations require that Freon be recycled, and **not** vented into the atmosphere.


Reverse Flow

Note : This test must be performed with the cooling system completely full and the coolant at ambient temperature.

Operate the engine at medium to high idle. Since the thermostats are closed, coolant flow is through the bypass line (1) and the engine (2).

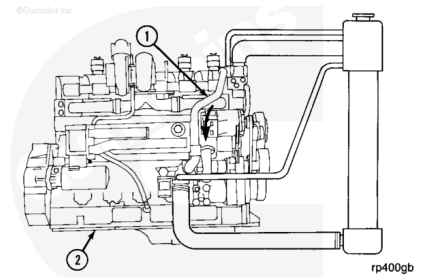


As the engine is warming up, use your hands or a contact pyrometer to check the temperature of the radiator top and bottom tanks.

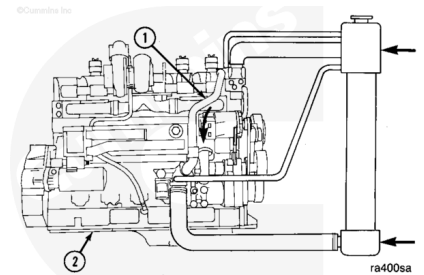

If the bottom tank begins to warm to the touch and the top tank remains cold, the radiator has reverse flow. Refer to the manufacturer's instructions for repair procedures.


Check the piping to be sure it is the correct size and routed per specifications. Refer to the appropriate Installation Recommendation Bulletin.

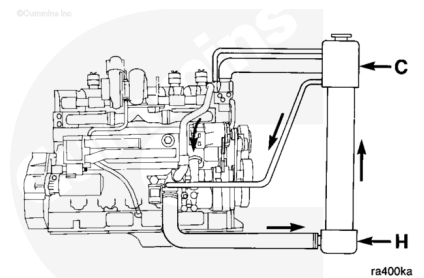

Test


Obstruction

Use a pressure gauge designed to measure 0-100 kPa [0-15 psi]. Install a valve on each side of the gauge.

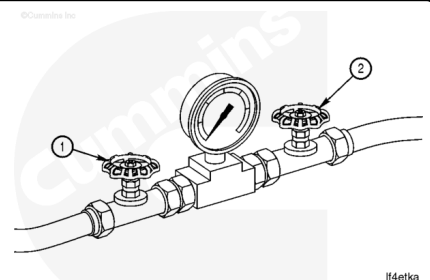


Install one line into the water pump inlet connection and the other into the thermostat return line on top of the radiator core.


Bleed the air from the gauge lines.

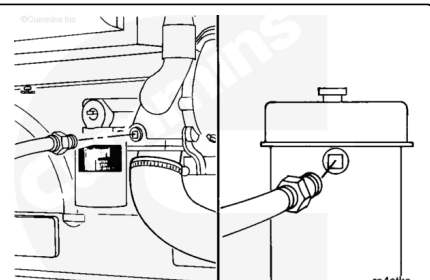

Restrict the radiator air flow. Operate the engine until the coolant temperature reaches 88-90°C [190-195°F].

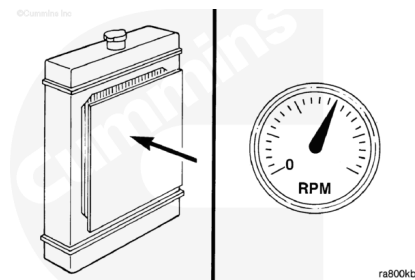

Operate the engine at rated rpm. **Close** valve No. 1 and **open** valve No. 2. Record the pressure at the top of the radiator.

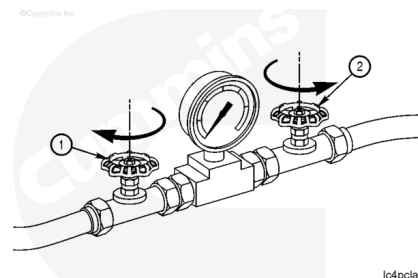

Close valve No. 2 and **open** valve No. 1. Record the pressure at the water pump inlet.

Compare the two pressure readings. If they differ by more than 35 kPa [5 psi], the radiator core or piping is obstructed.

