

Trainings ▾

Remove


⚠ WARNING ⚠

Allow the engine to cool. Wait until the coolant temperature is below 50° [120°] before draining the coolant. Heated coolant spray or steam can cause personal injury.


⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not used, dispose of in accordance with local environmental regulations.

Drain the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html>).

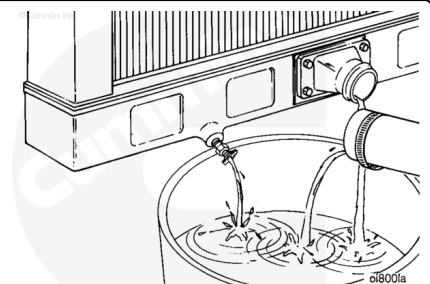


Disconnect the lower radiator hose from the water pump inlet. Disconnect the lower radiator hose from the radiator bottom tank. Remove the lower radiator hose.

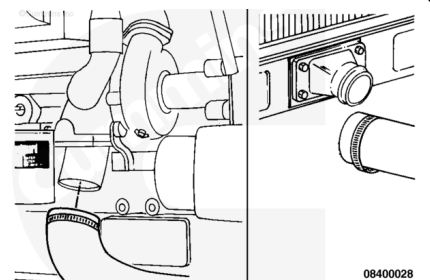


Conventional Aftercooling

Remove the upper radiator hoses from the thermostat housing.

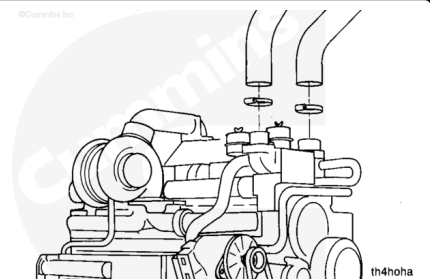


Remove the upper radiator hoses from the top tank of the radiator.

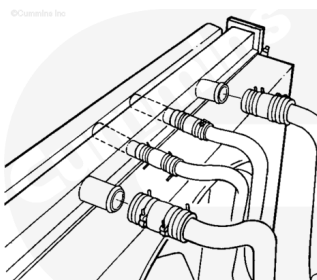

08400029


Low Temperature Aftercooling

Remove the Low Temperature Aftercooling hoses from the thermostat housing.

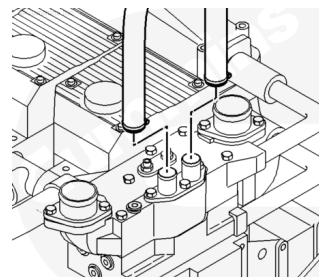

08400031

Remove the Low Temperature Aftercooling radiator hoses from the top tank of the radiator.

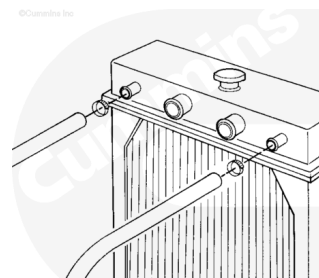

08400030


Inspect for Reuse

⚠ CAUTION ⚠

Do not bend or deform the hoses during inspection. This can cause the hoses to crack.

Check all hoses for cracks, cuts, or collapsing

Note : The silicone engine coolant hose will exhibit swelling due to the elasticity of the hose.

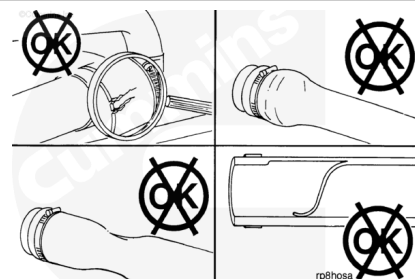


rp8hosa

Install


Conventional Aftercooling

Install the upper radiator hoses to the thermostat housing.
Tighten the clamps.

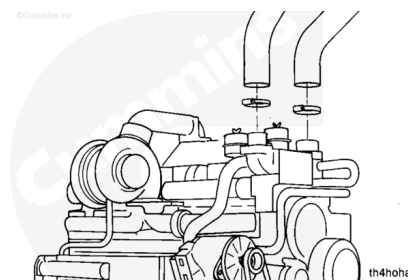

Worm Clamp	5 n.m	[50 in-lb]
T-Bolt Clamp	8 n.m	[70 in-lb]


Install the upper radiator hoses to the top tank of the radiator.
Tighten the clamps.

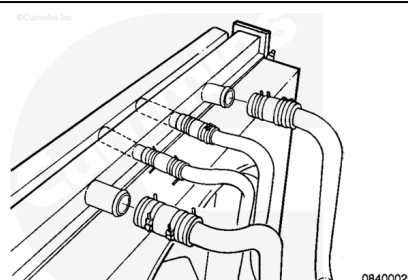

Worm Clamp	5 n.m	[50 in-lb]
T-Bolt Clamp	8 n.m	[70 in-lb]


Low Temperature Aftercooling

Install the upper LTA radiator hoses to the thermostat housing.
Tighten the clamps.

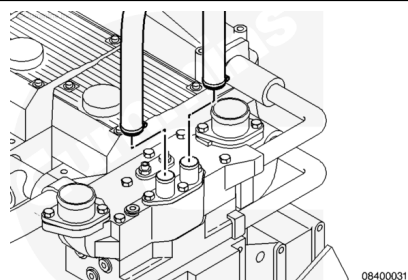


Worm Clamp	5 n.m	[50 in-lb]
T-Bolt Clamp	8 n.m	[70 in-lb]

Install the Low Temperature Aftercooling radiator hoses to the top tank of the radiator.
Tighten the clamps.

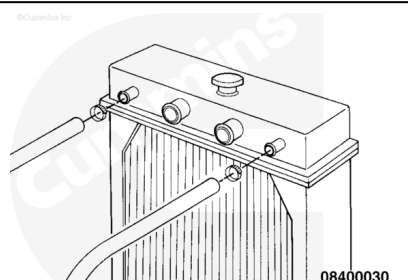

Worm Clamp	5 n.m	[50 in-lb]
T-Bolt Clamp	8 n.m	[70 in-lb]

Install the lower radiator hose to the water pump inlet. Tighten the clamps.

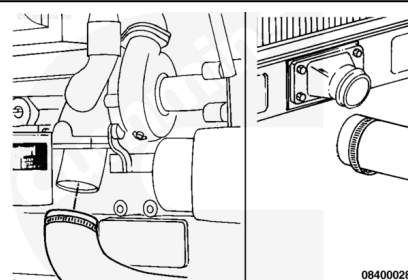


Worm Clamp	5 n.m	[50 in-lb]
T-Bolt Clamp	8 n.m	[70 in-lb]

Install the lower radiator hose to the radiator bottom tank.
Tighten the clamps.

Worm Clamp	5 n.m	[50 in-lb]
T-Bolt Clamp	8 n.m	[70 in-lb]

Fill the cooling system. Refer to Procedure 008-018
(/qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html).

Operate the engine to 70°C [160°F] coolant temperature. Check for leaks.

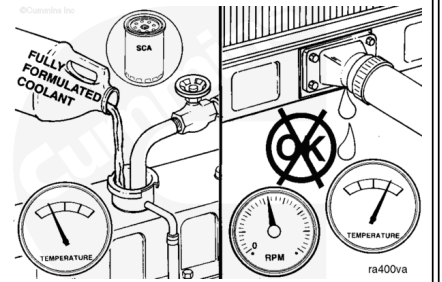

Last Modified: 13-Dec-2004
