

Trainings ▾


Inspect for Reuse

Inspect the rubber seal of the pressure cap for damage.

Inspect the radiator fill neck for cracks or other damage.

Refer to the radiator manufacturer's instructions if the fill neck is damaged.

Note : Be sure the correct radiator cap is being used.
The pressure rating must be 48 kPa [7 psi] or greater.

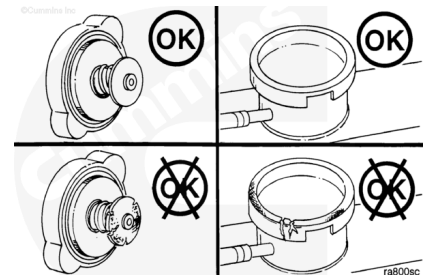

Pressure Test

Pressure test the radiator cap.

The pressure cap **must** seal within 14 kPa [2 psi] of the value printed on the cap, or it **must** be replaced.

