


Trainings ▾

Leak Test

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

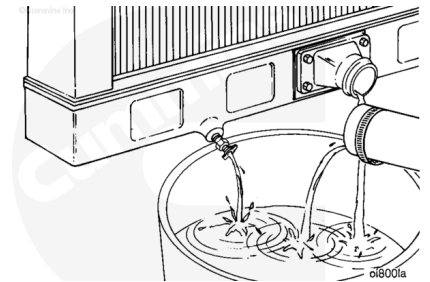

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ CAUTION ⚠

Use caution when draining coolant that the coolant is not spilled or drained into the bilge area. Do not pump coolant overboard. If the coolant is not reused, it must be disposed of in accordance with local environmental regulations.

Conventional Aftercooling

Drain the cooling system. Refer to Procedure 008-018
(</qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html>)

Plug the radiator fill line outlet.

Fill the top tank to within 5 mm [2 in] from the top of the radiator with water.

If the level drops and leakage is observed from the draincock and the lower radiator outlet, the baffle is leaking. The radiator **must** be repaired or replaced.

