


Trainings ▾

Install

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

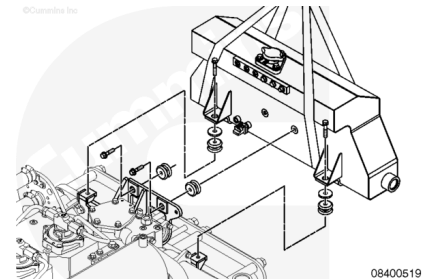

Install the expansion tank onto the bracket.

Install the four mounting capscrews and rubber vibrations isolators.

Tighten the capscrews.

Torque Value: 40 n•m [30 ft-lb]

Remove the lifting sling.

Install the coolant make-up hose to the expansion tank and the coolant bypass tube.

Torque Value: 74 n•m [55 ft-lb]

