



Trainings ▾

Remove

Remove the coolant make-up hose from the expansion tank and the coolant bypass tube.

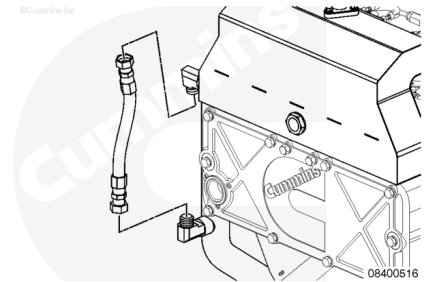


Attach two approved lifting straps and an approved lifting device to lift the expansion tank.

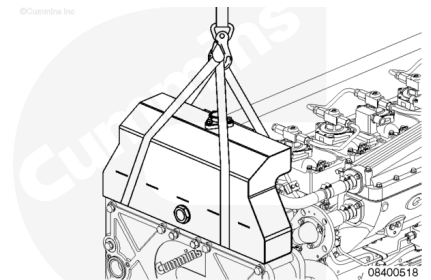

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

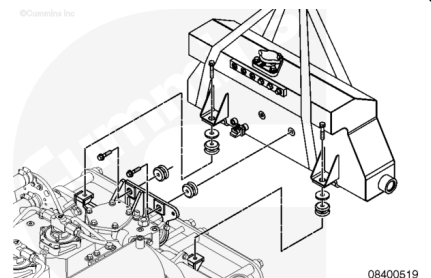

The expansion tank is mounted onto a support bracket which is mounted onto the engine. The support bracket has two capscrews that attach to the back of the expansion tank and two capscrews on the outboard sides of the bracket.

Remove the four capscrews from the expansion tank support bracket.

Remove the expansion tank from the support bracket.

Remove the rubber vibration isolators.

Last Modified: 03-Aug-2006
